



## Sauna 250, Ø200 (Husas)


**NB! Please read whole manual  
before start.**

**All given measurements  
are in millimeters!**

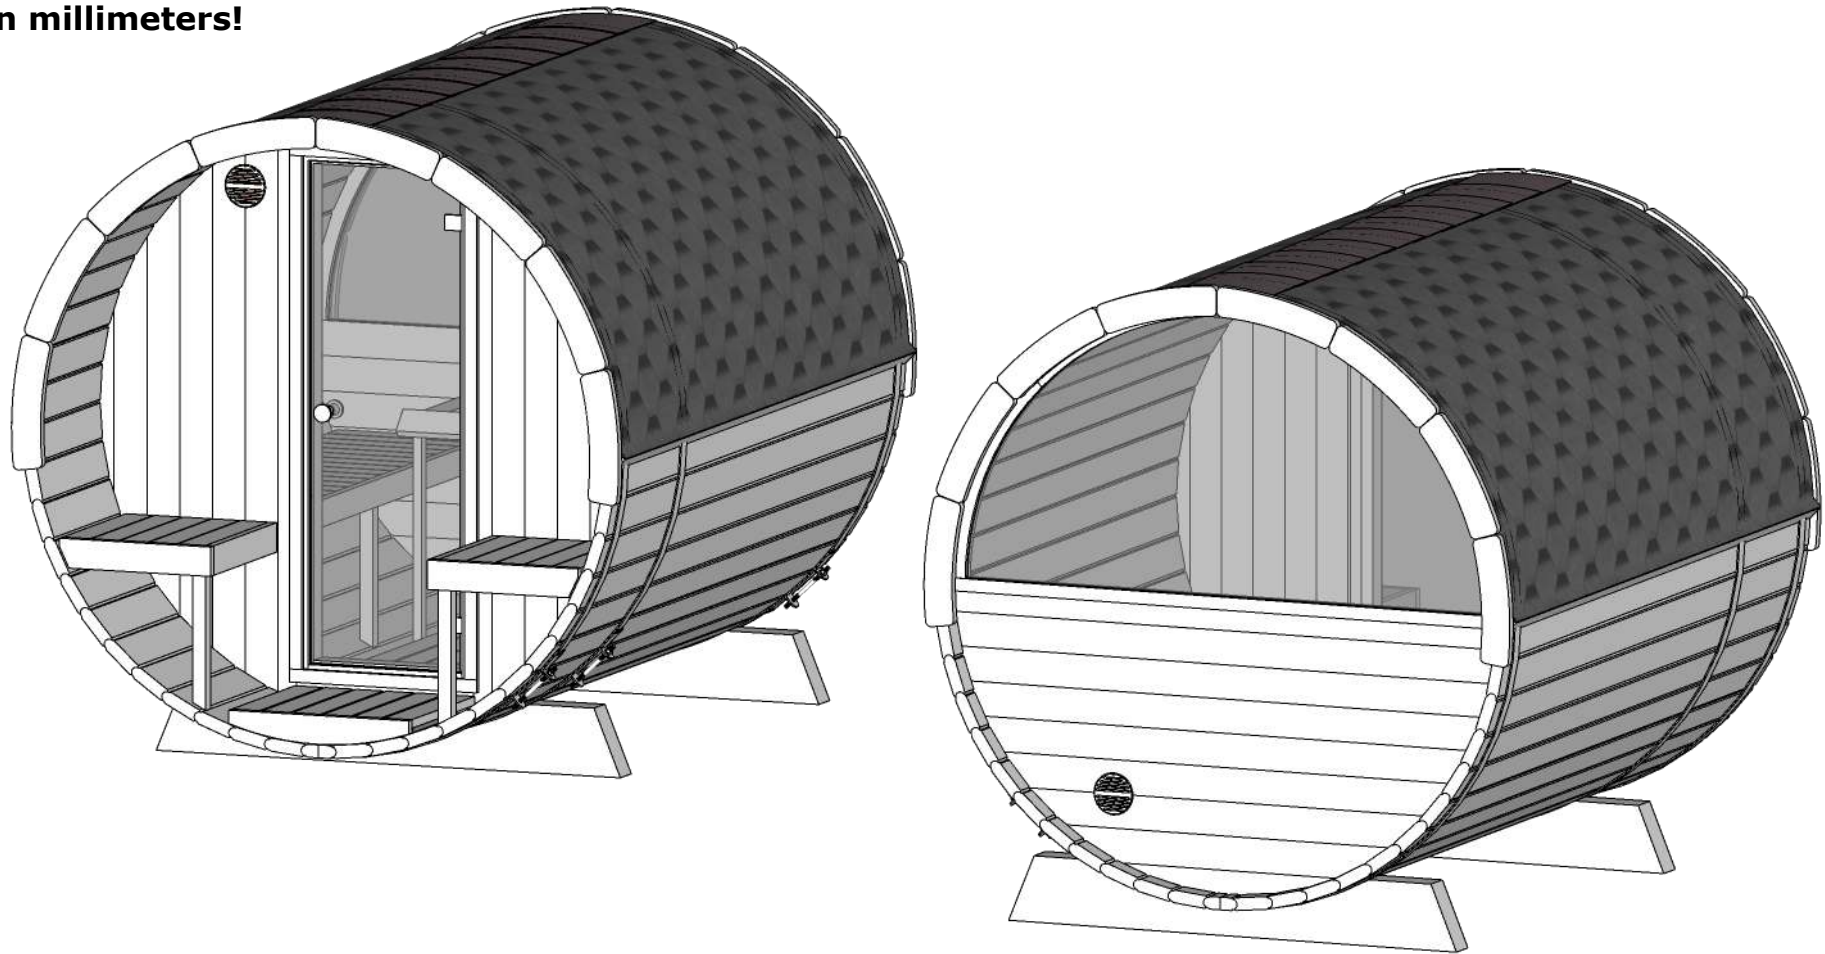

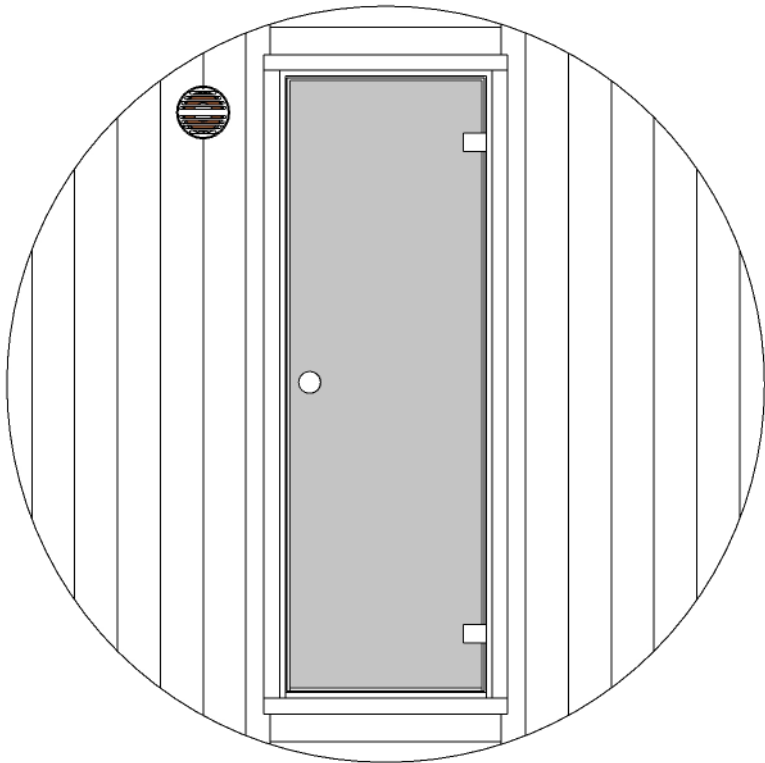


PESPK

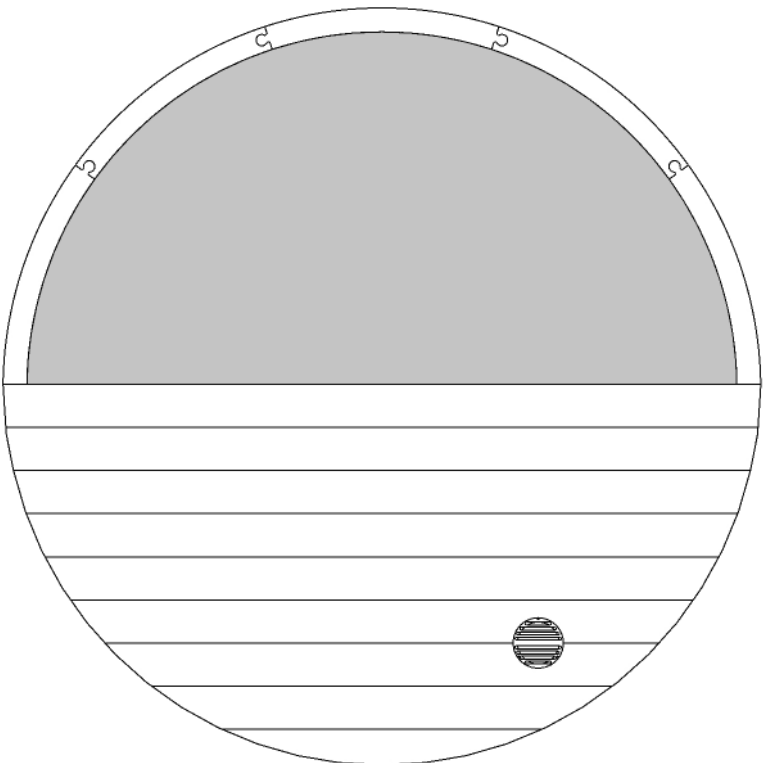

PK



Sauna 250, Ø200

Details list.

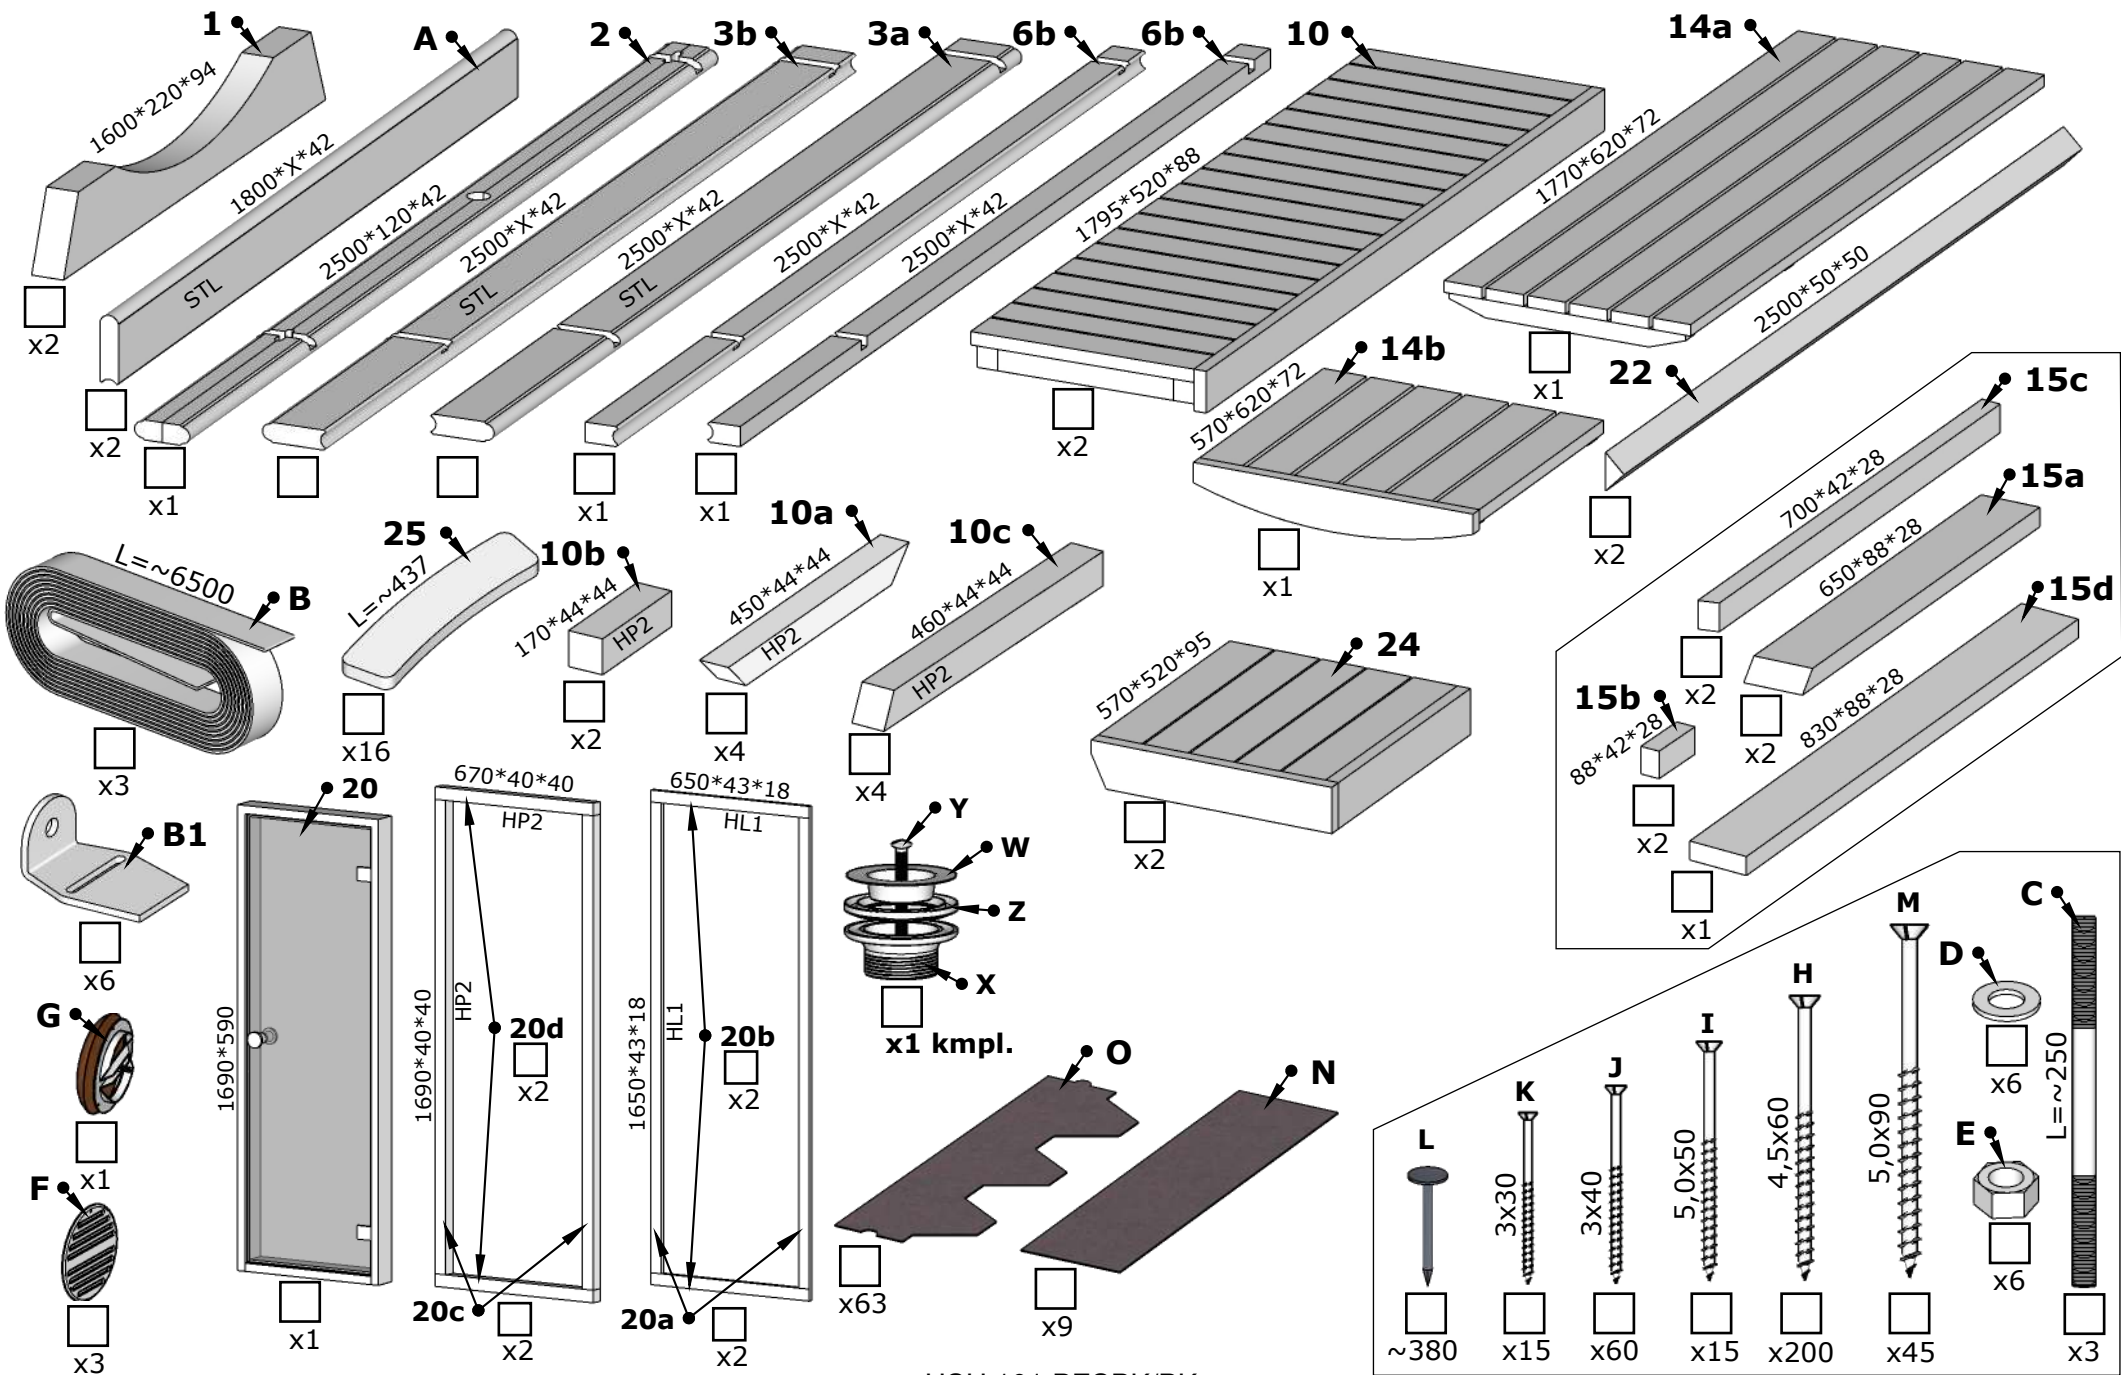


# Wooden front wall installation


## Details

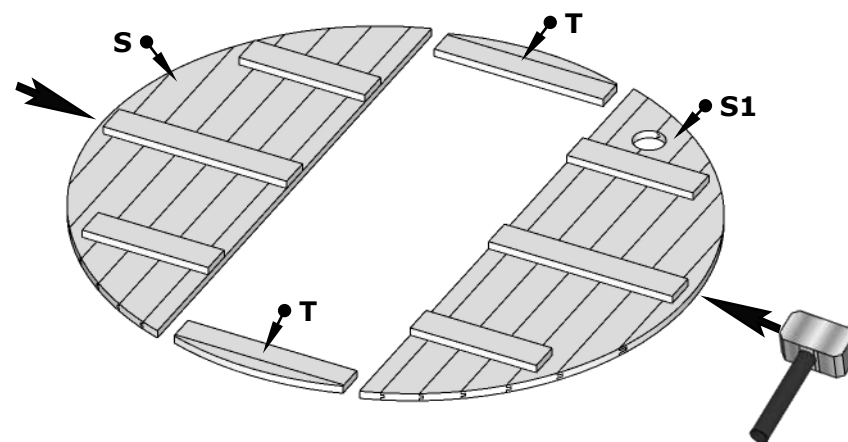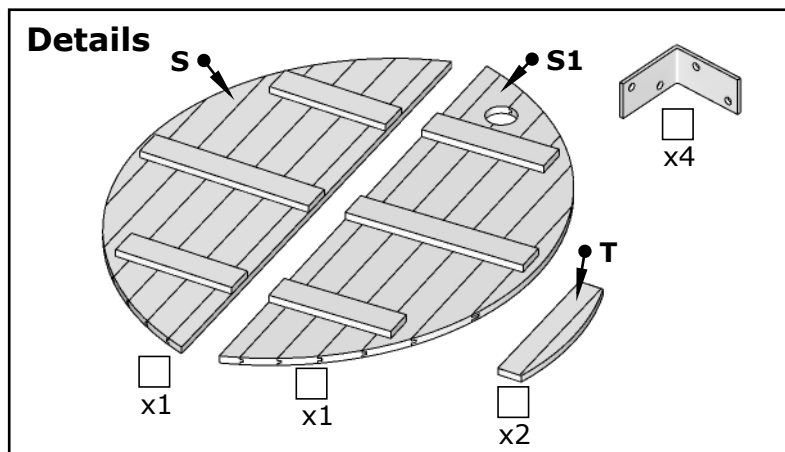


I

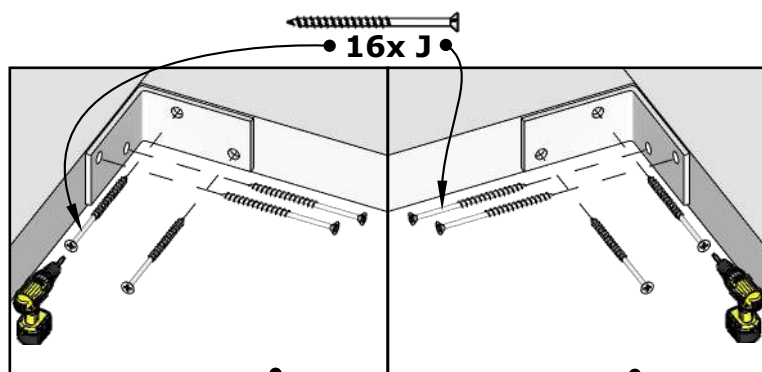


Cut board from pallet L=~1930mm.  
Fix it diagonally to make wall more rigid during the installation.

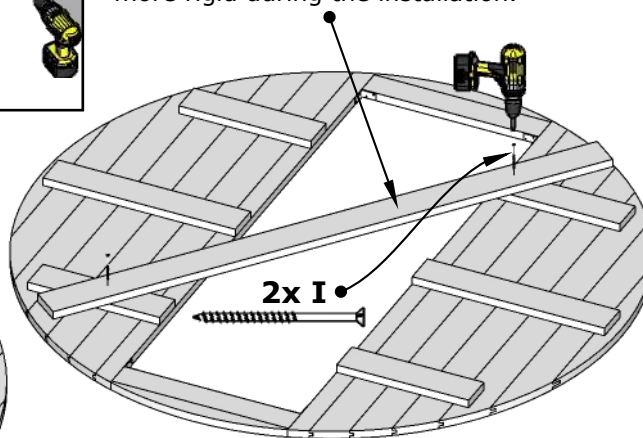

III

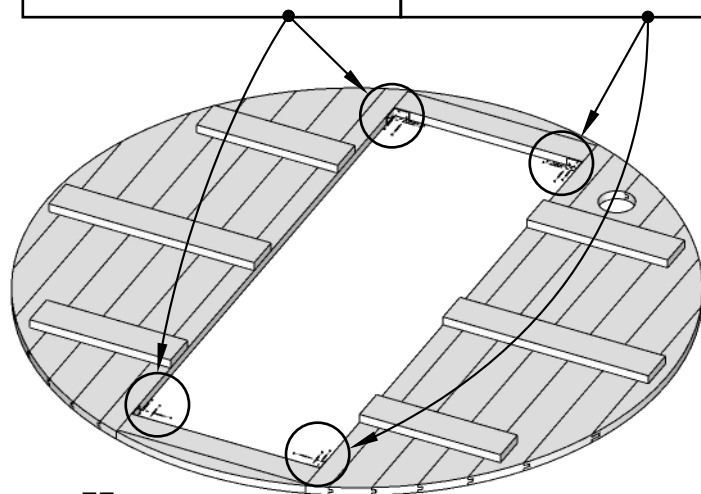




II

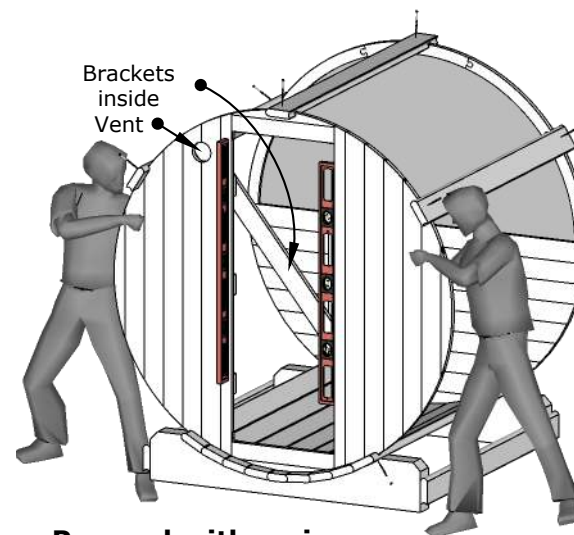

Proceed with main  
installation manual!

## Half-moon glass wall mounting





(Wall thickness 28 mm.)

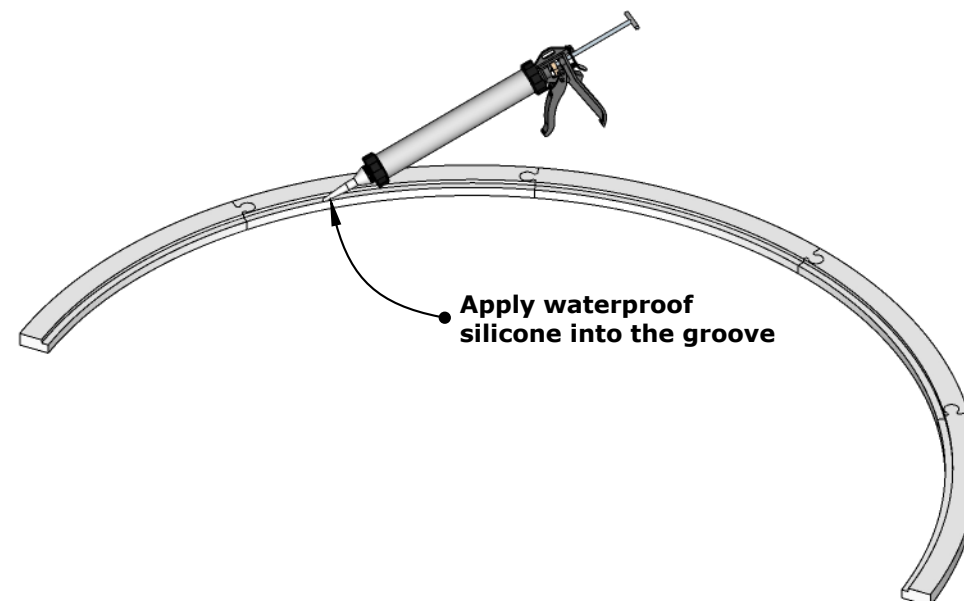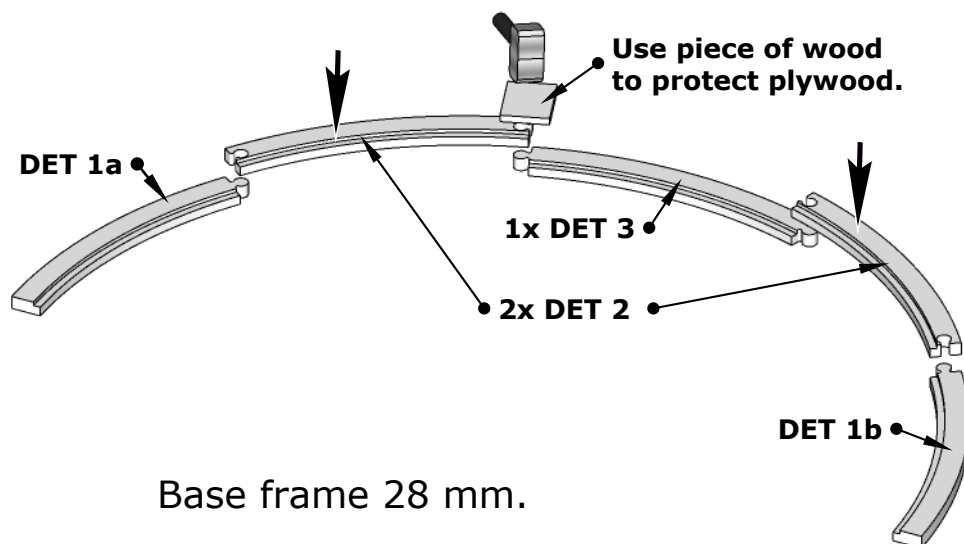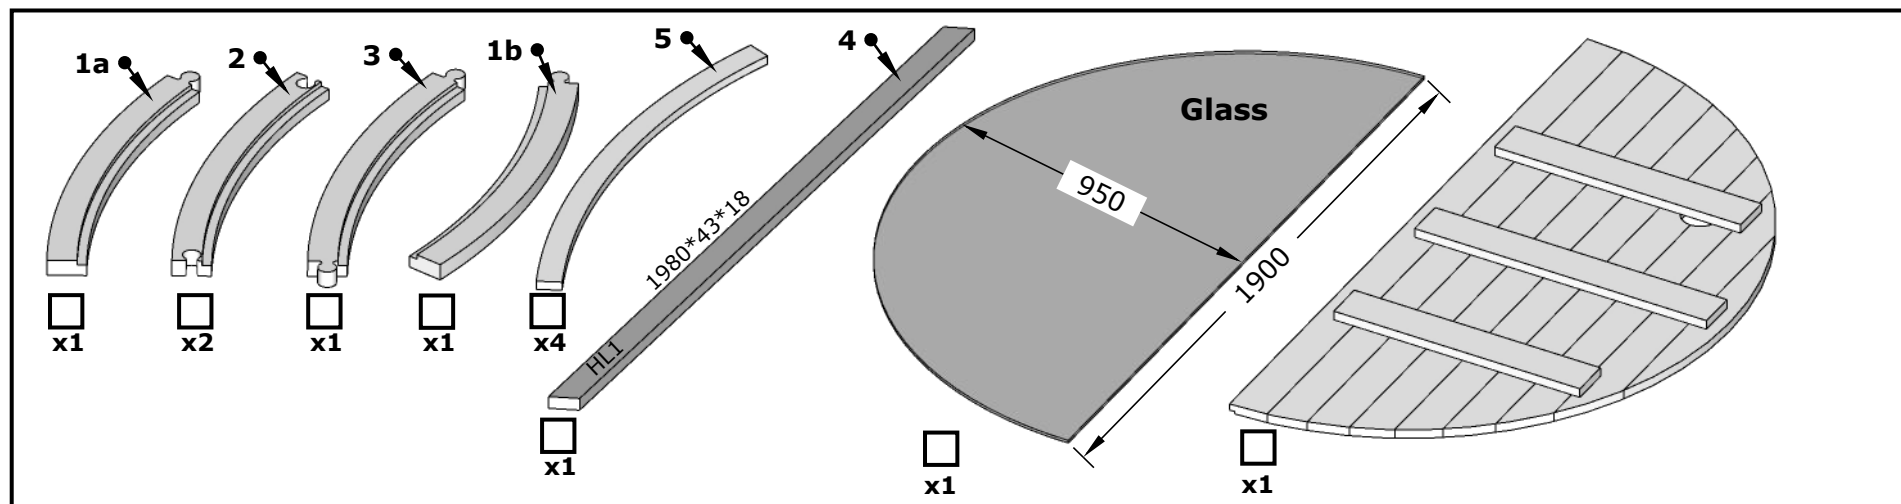

1.

## Half-moon glass wall mounting


(Wall thickness 28 mm.)

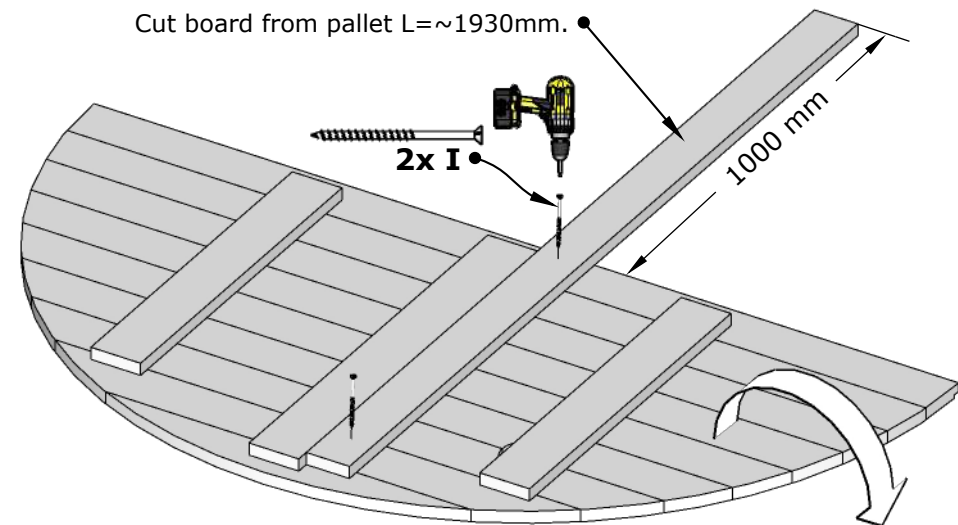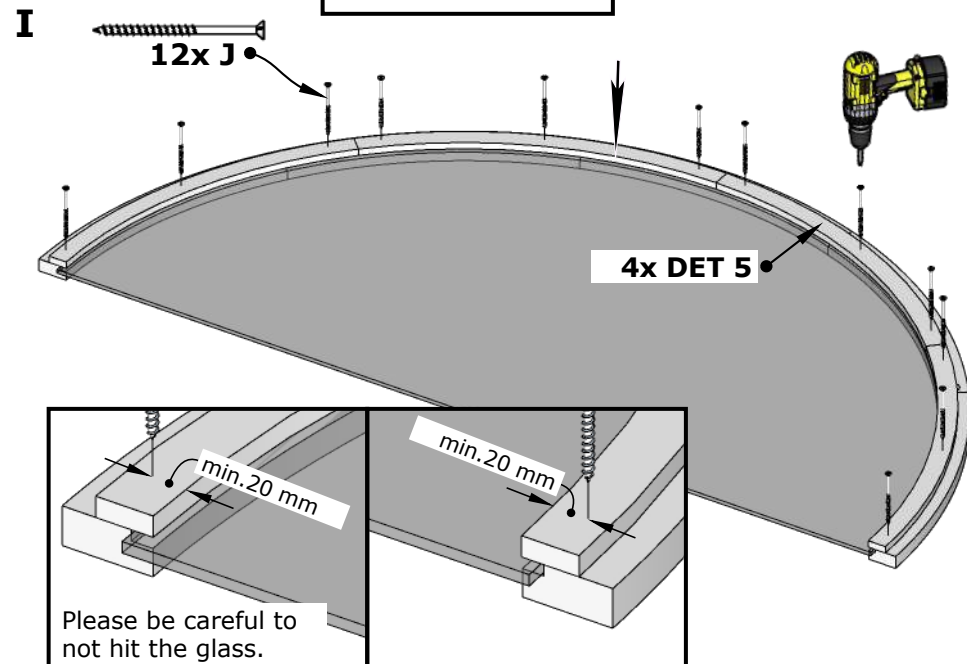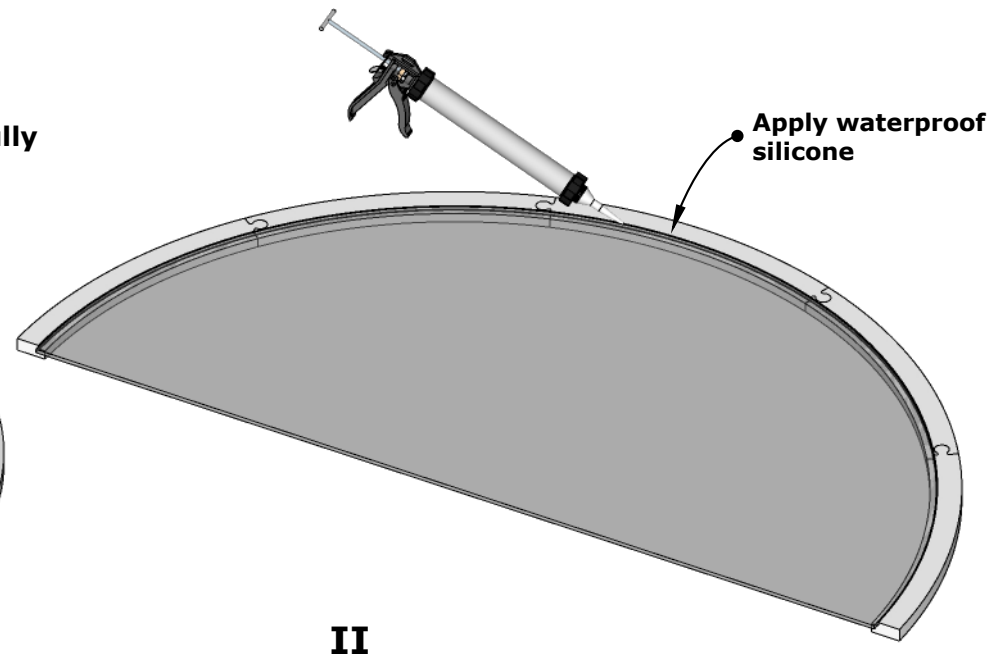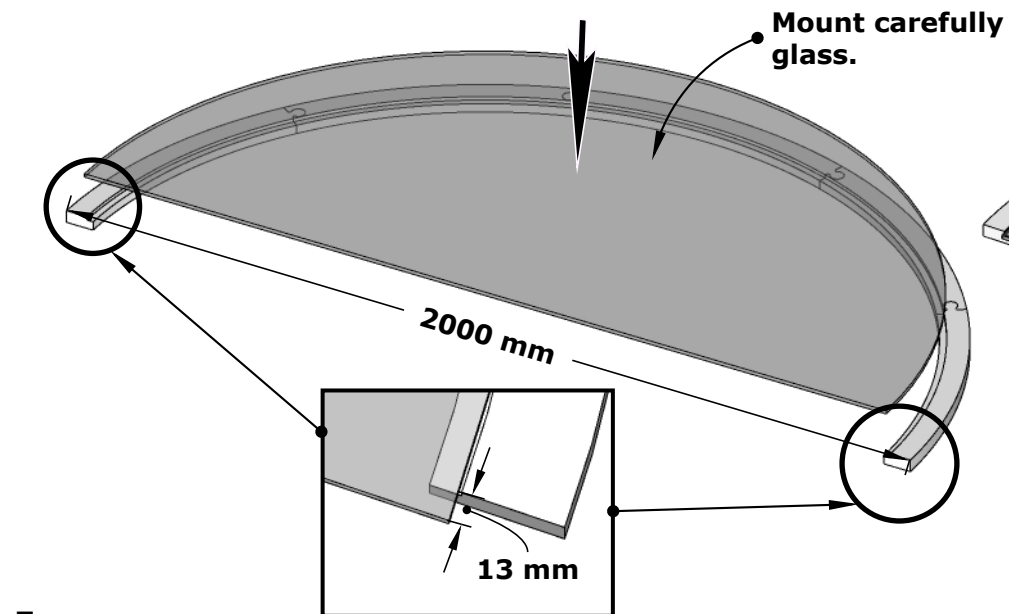

2. **III**


## Half-moon glass wall mounting

(Wall thickness 28 mm.)

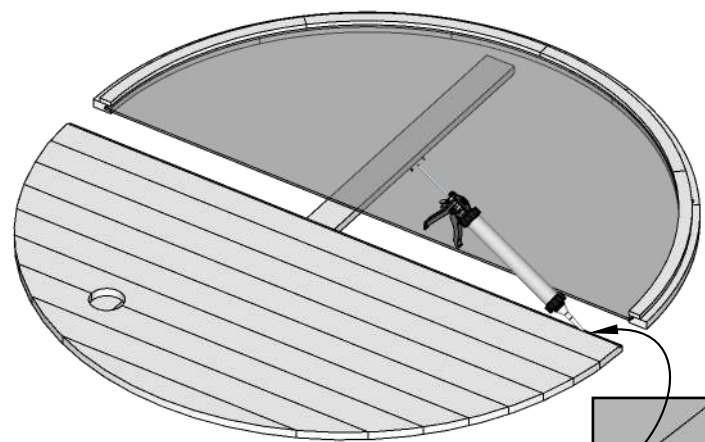

Apply waterproof  
silicone into the groove

**I**

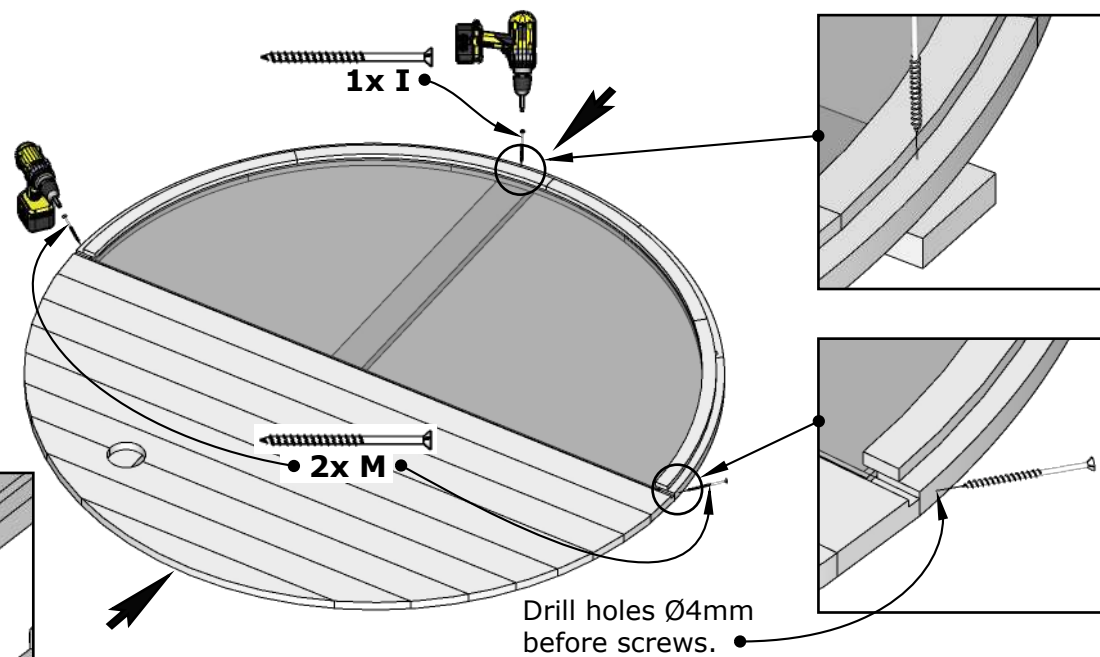


1x I

2x M

Drill holes Ø4mm  
before screws.


**II**

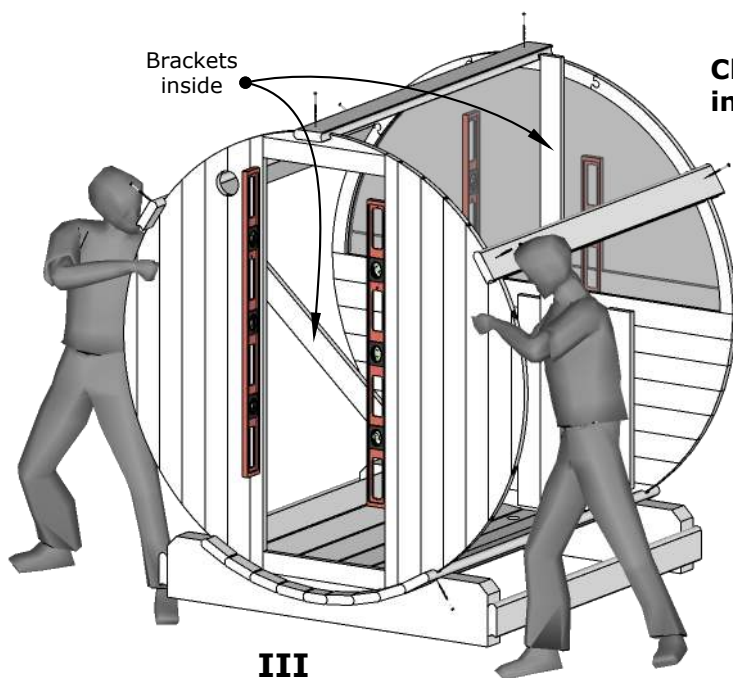

Brackets  
inside

**III**

Check also main  
installation manual.

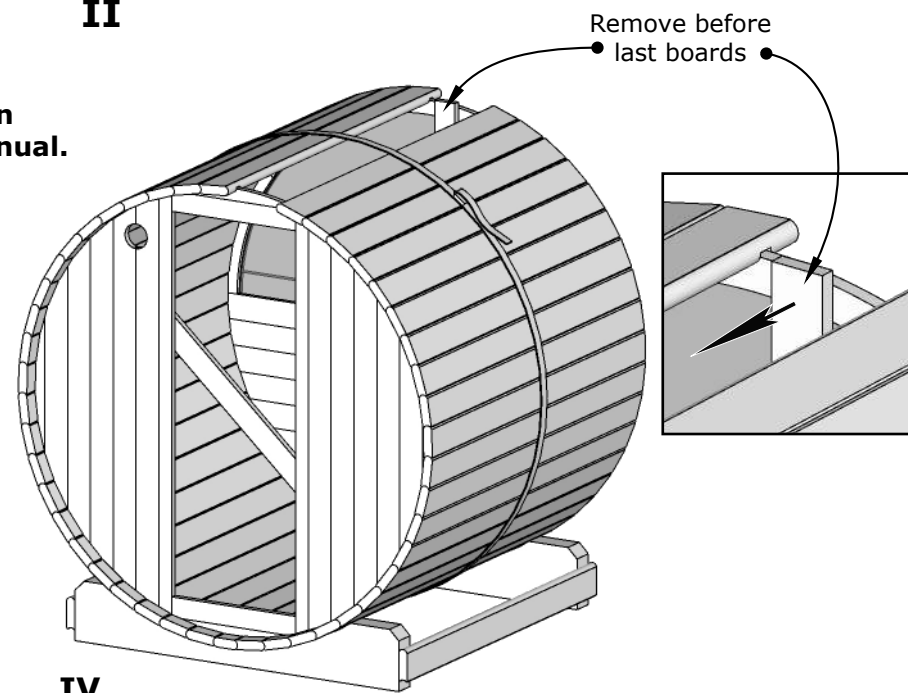


Remove before  
last boards

**IV**


**3.**

## Half-moon glass wall mounting


(Wall thickness 28 mm.)

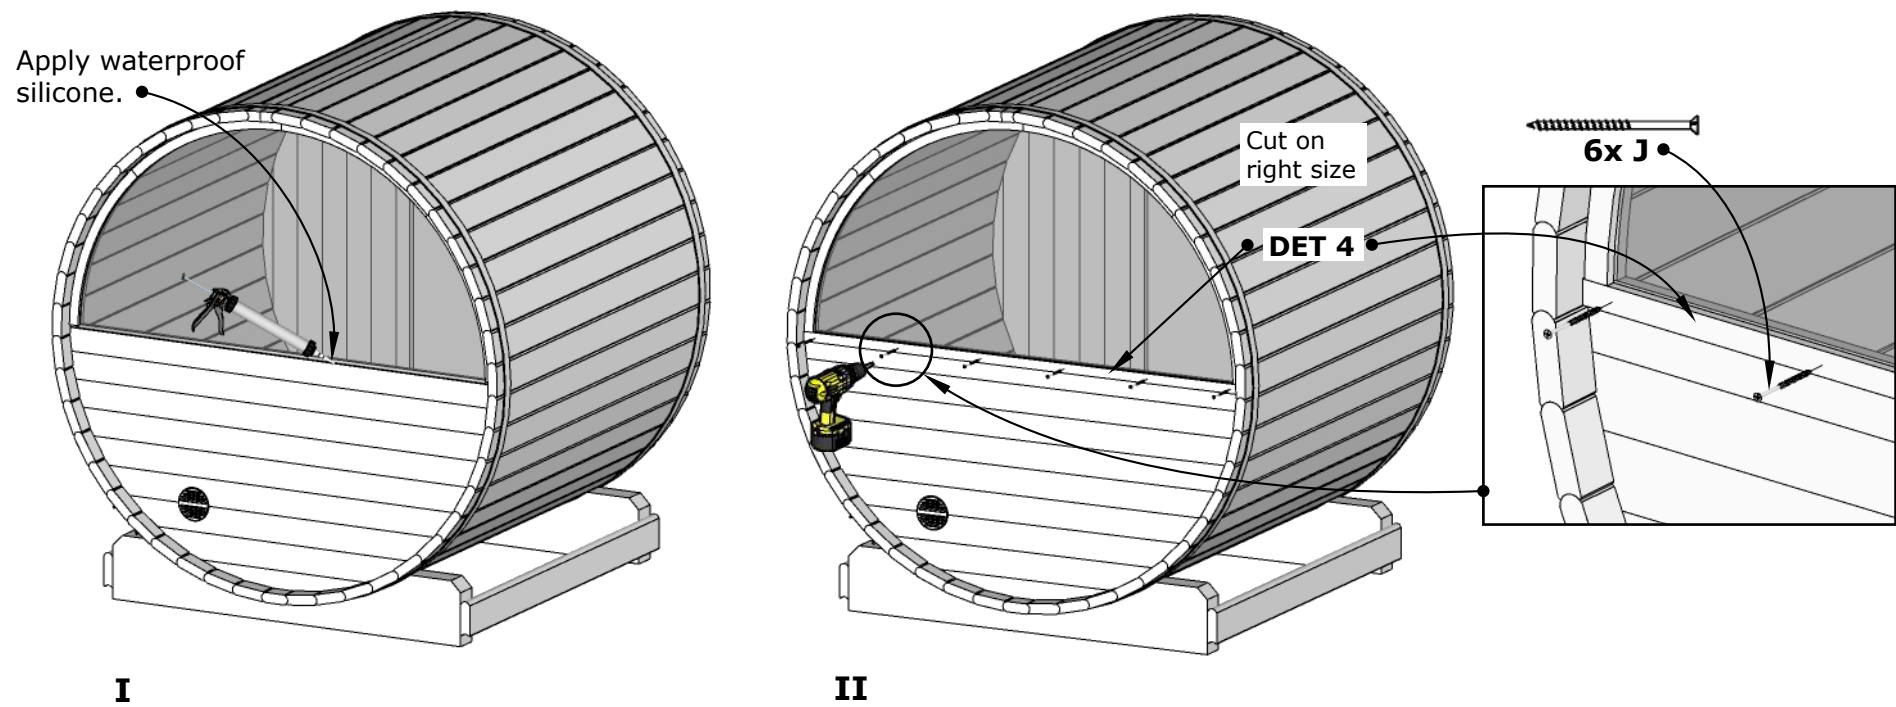


Sauna 250, Ø200

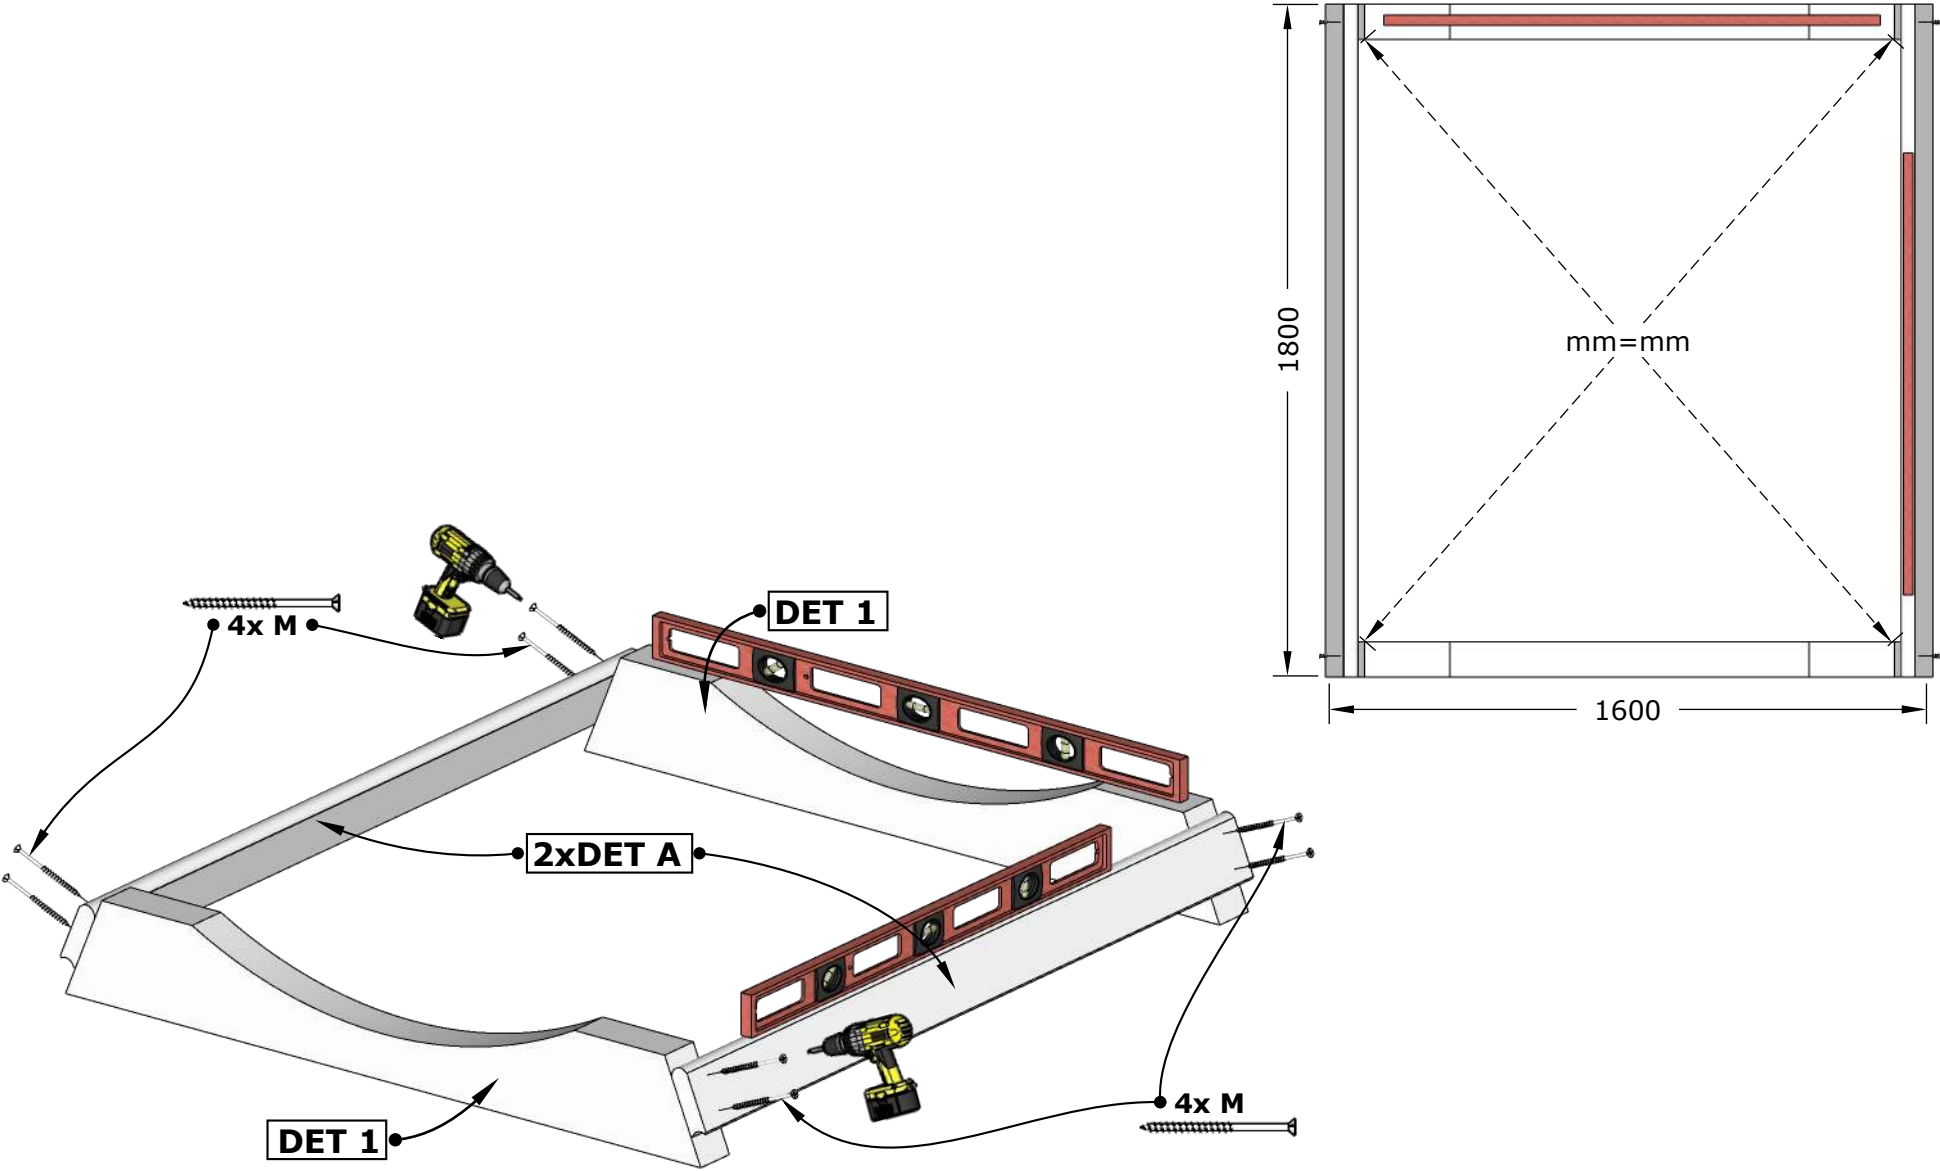

Sauna 250, Ø200

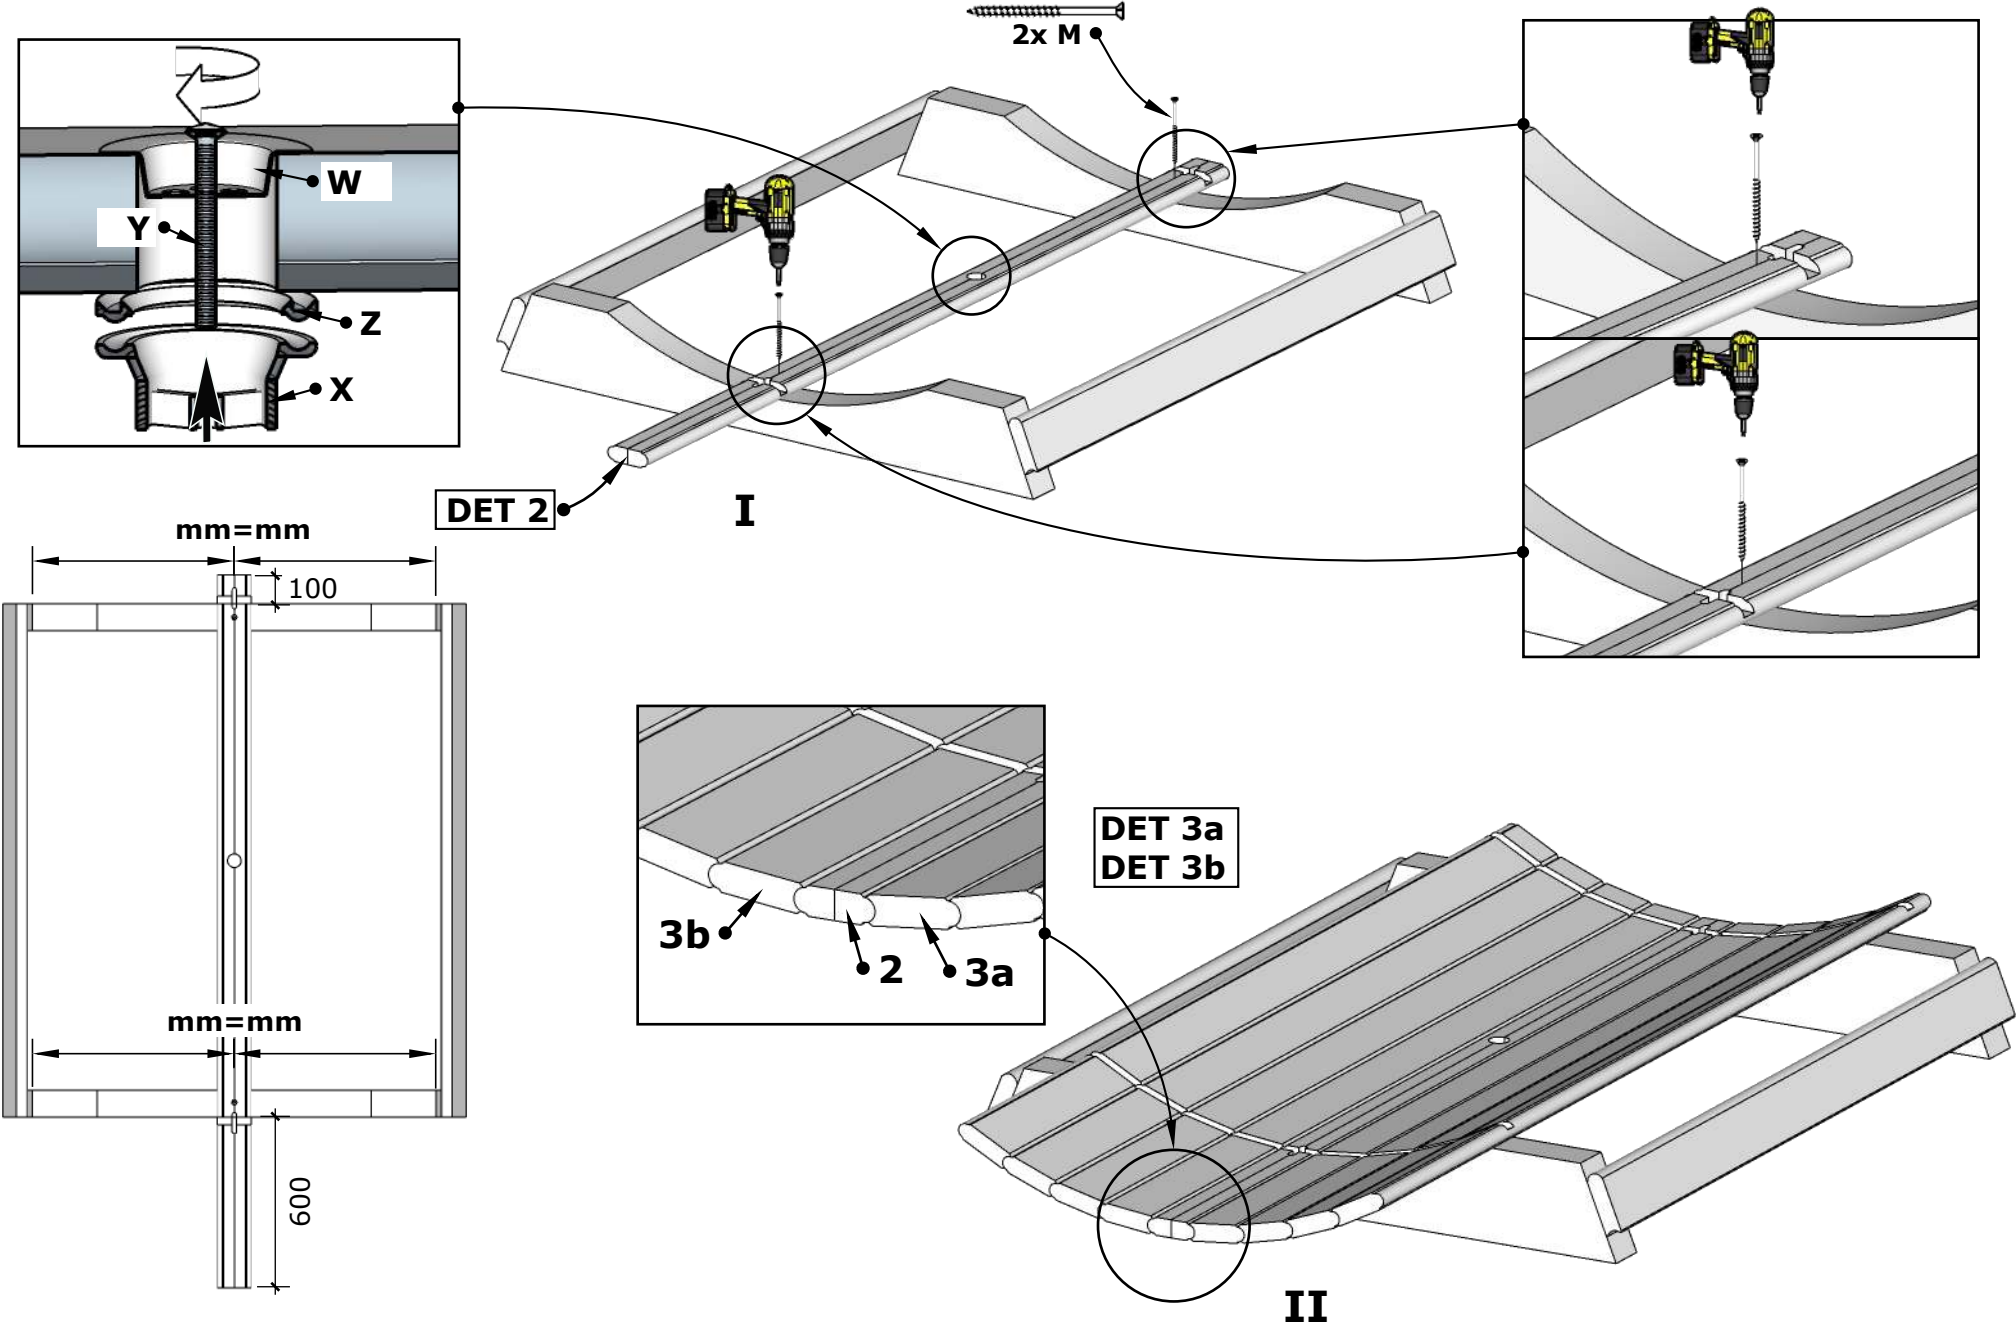

Sauna 250, Ø200

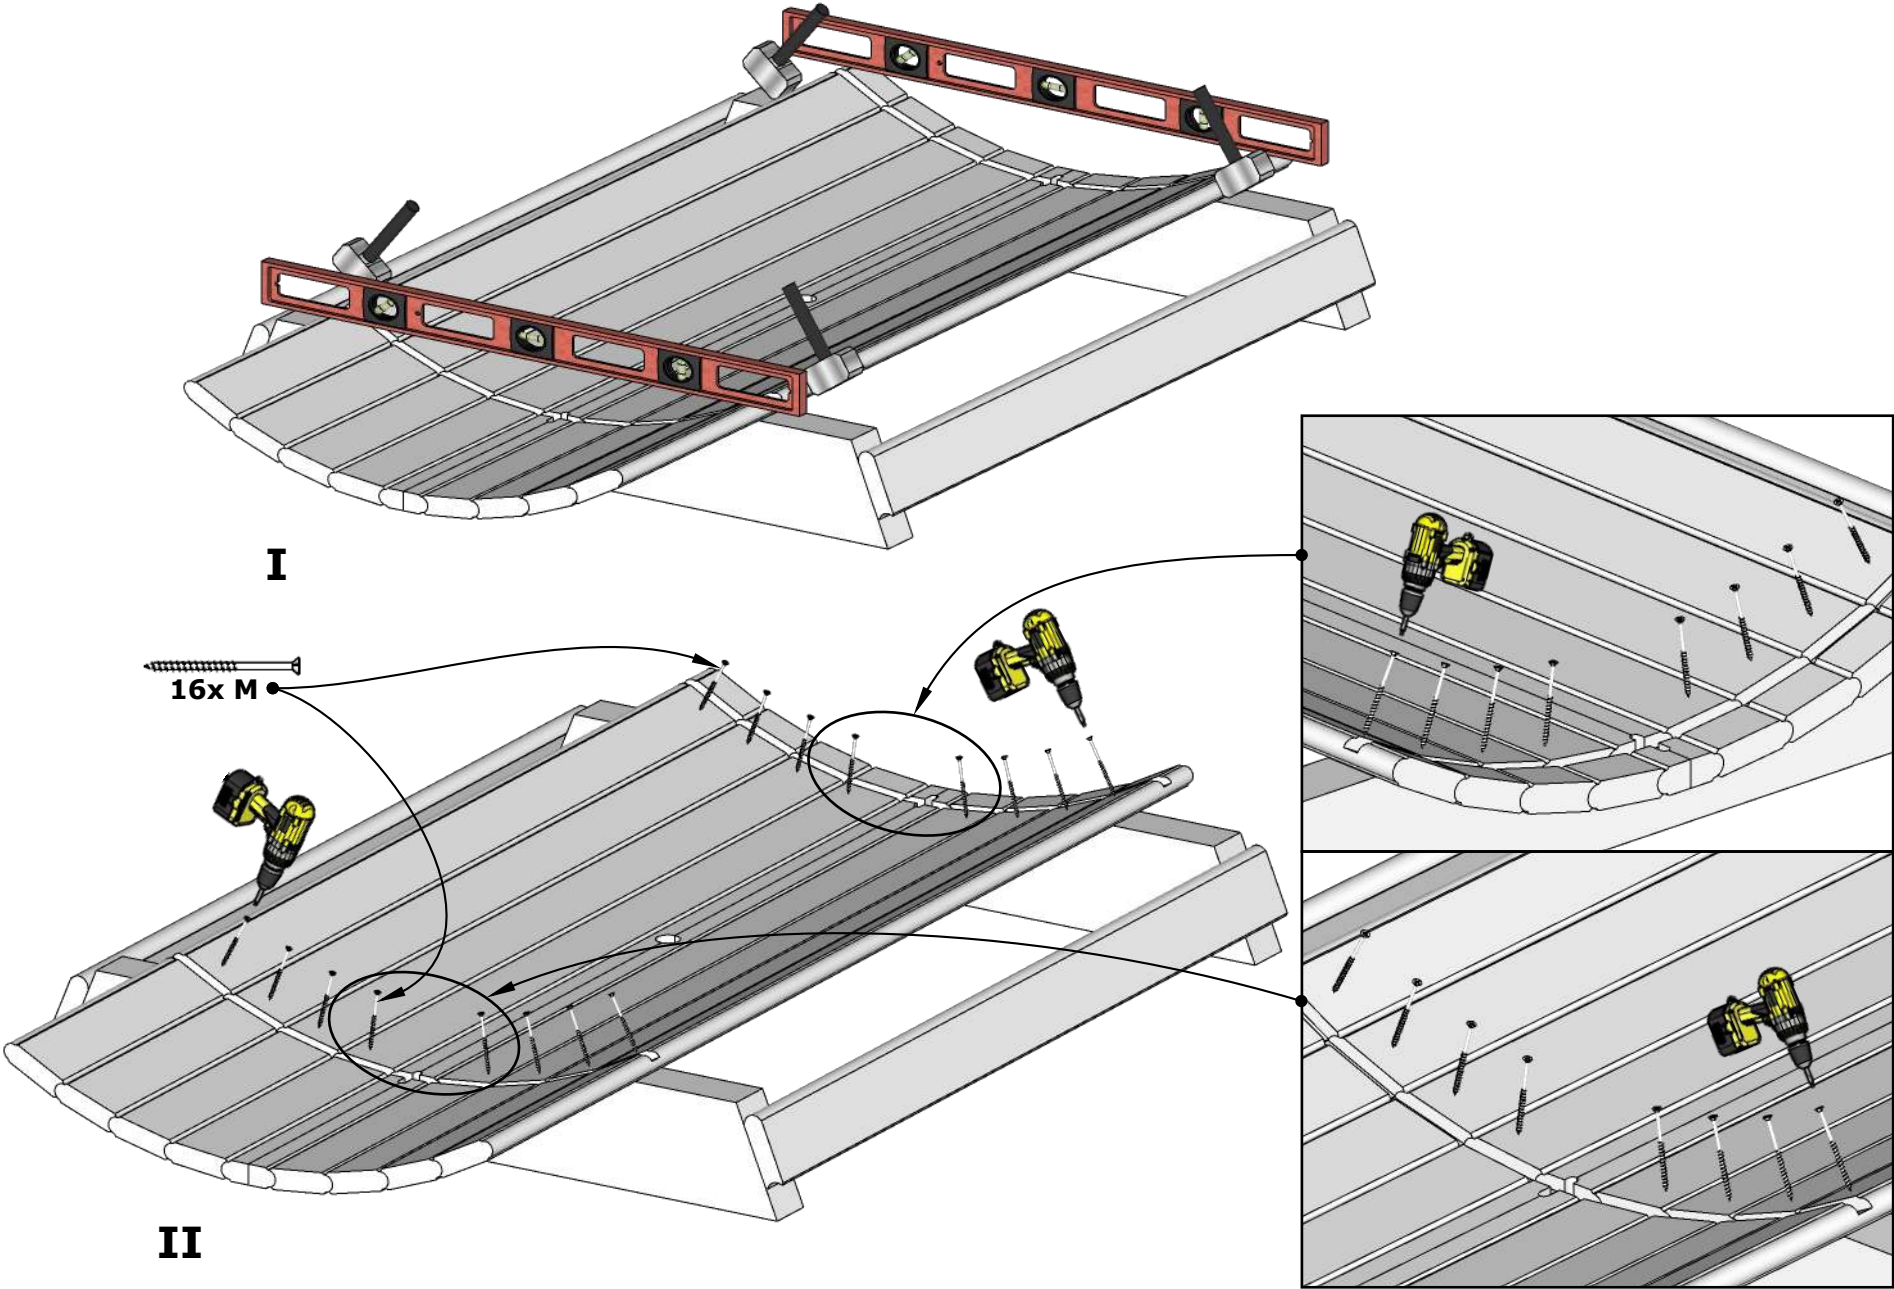

Sauna 250, Ø200




Check walls installation manual on extra pages!



Sauna wall configuration depends on Your model!

DET 3a  
DET 3b


Fix temporarily to support walls.

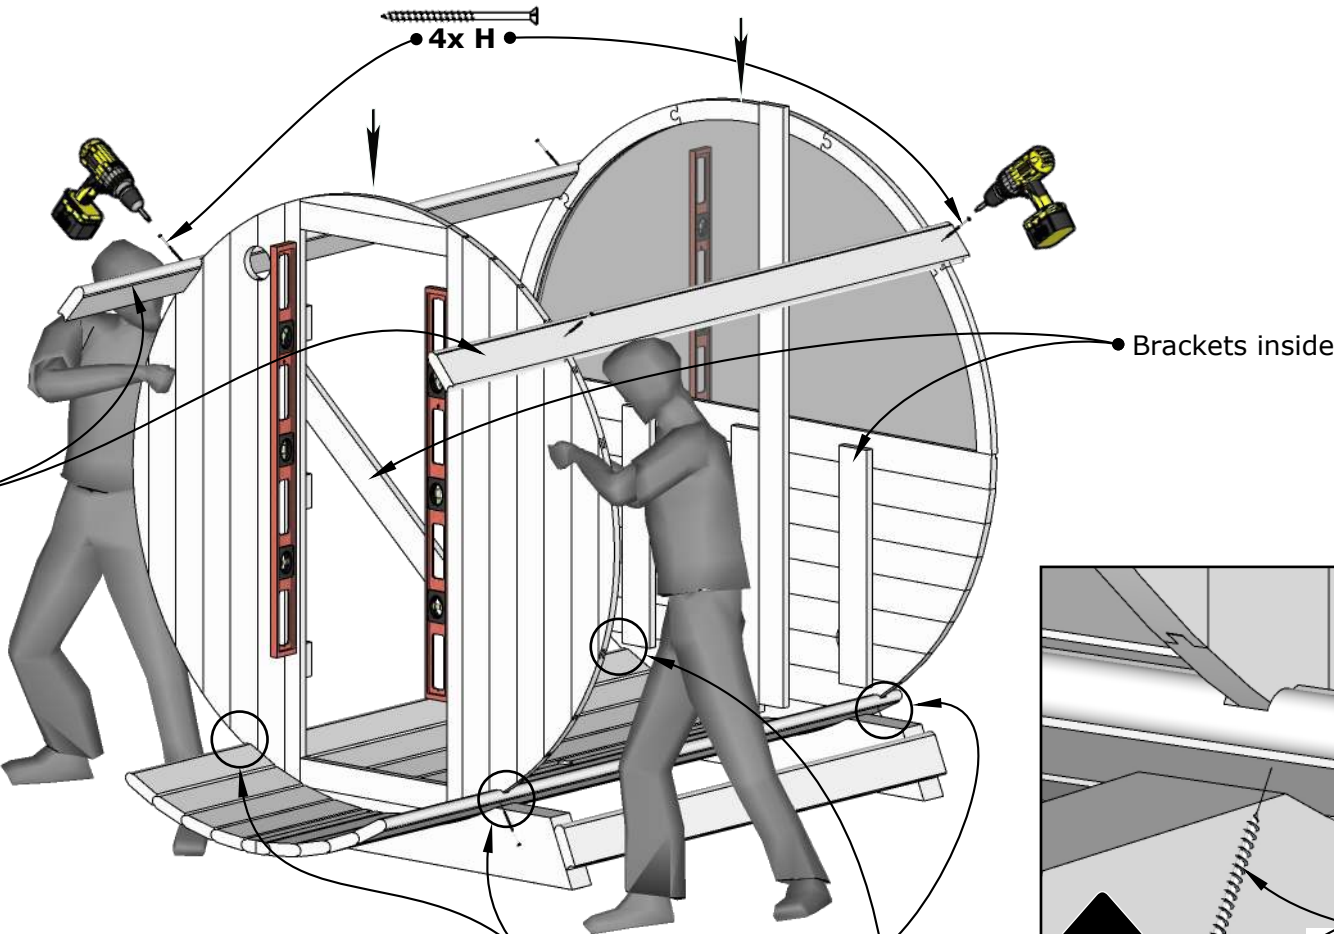


Important! Leave the gap ~7 mm.

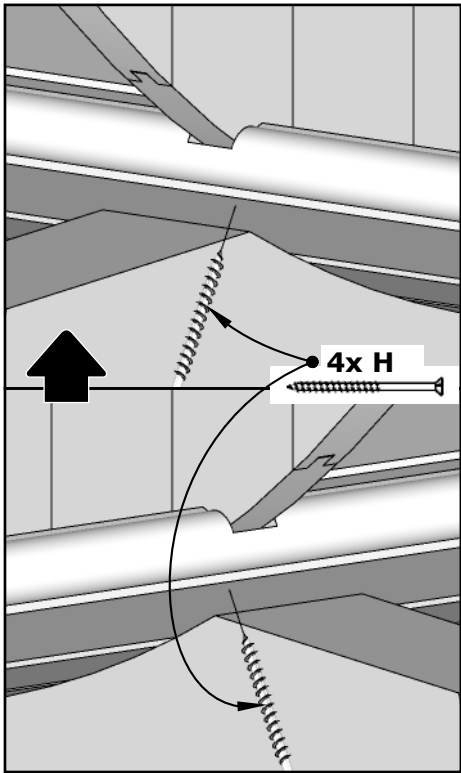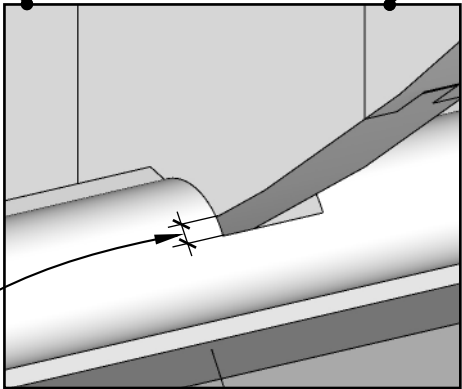


Sauna 250, Ø200

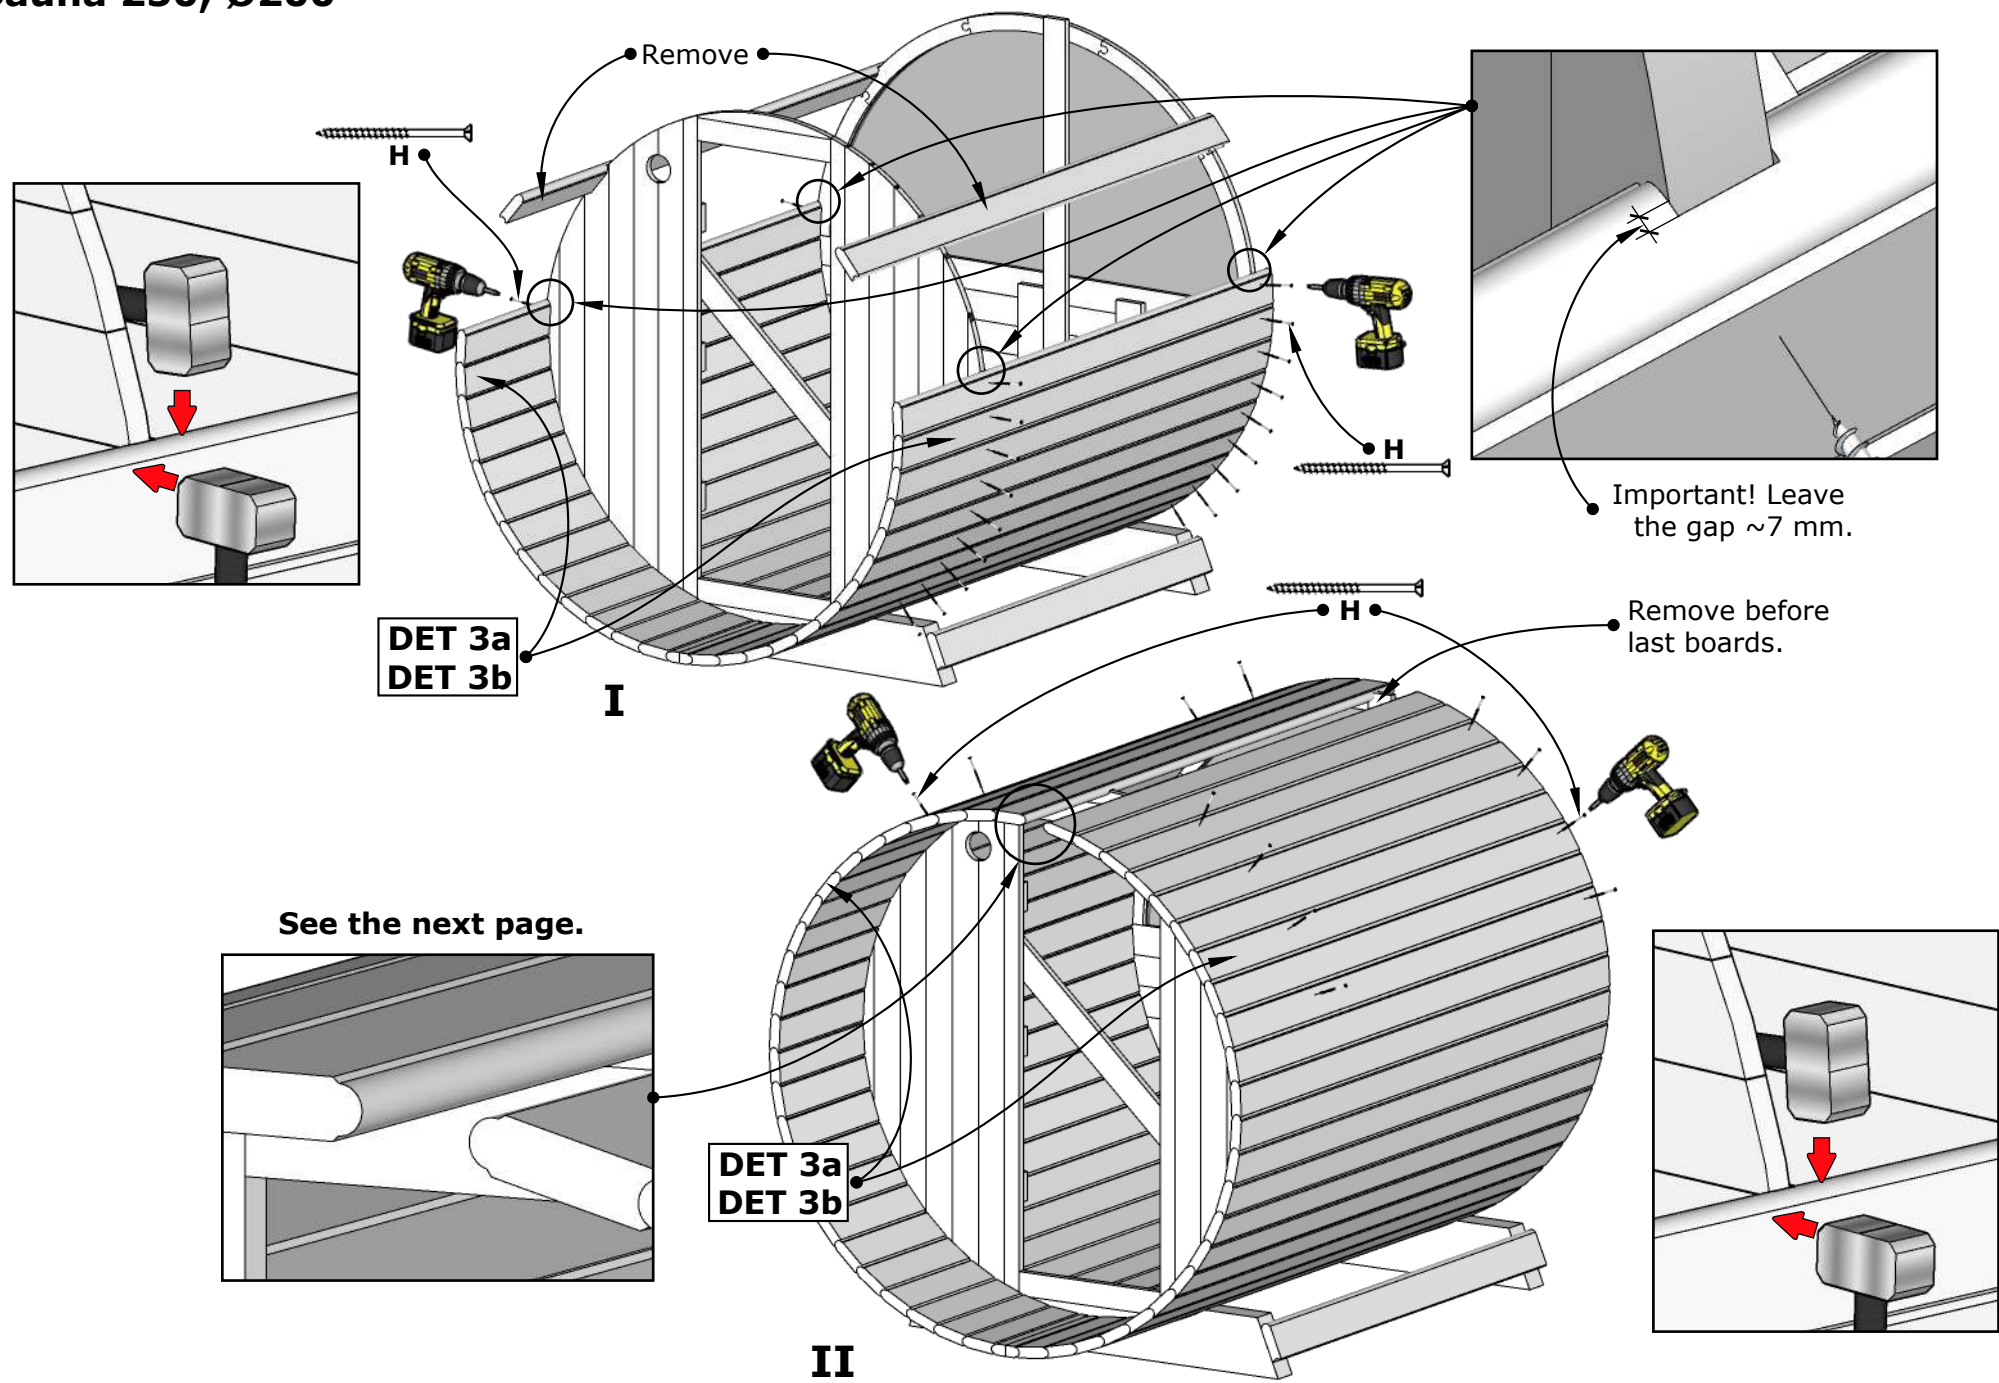

Sauna 250, Ø200

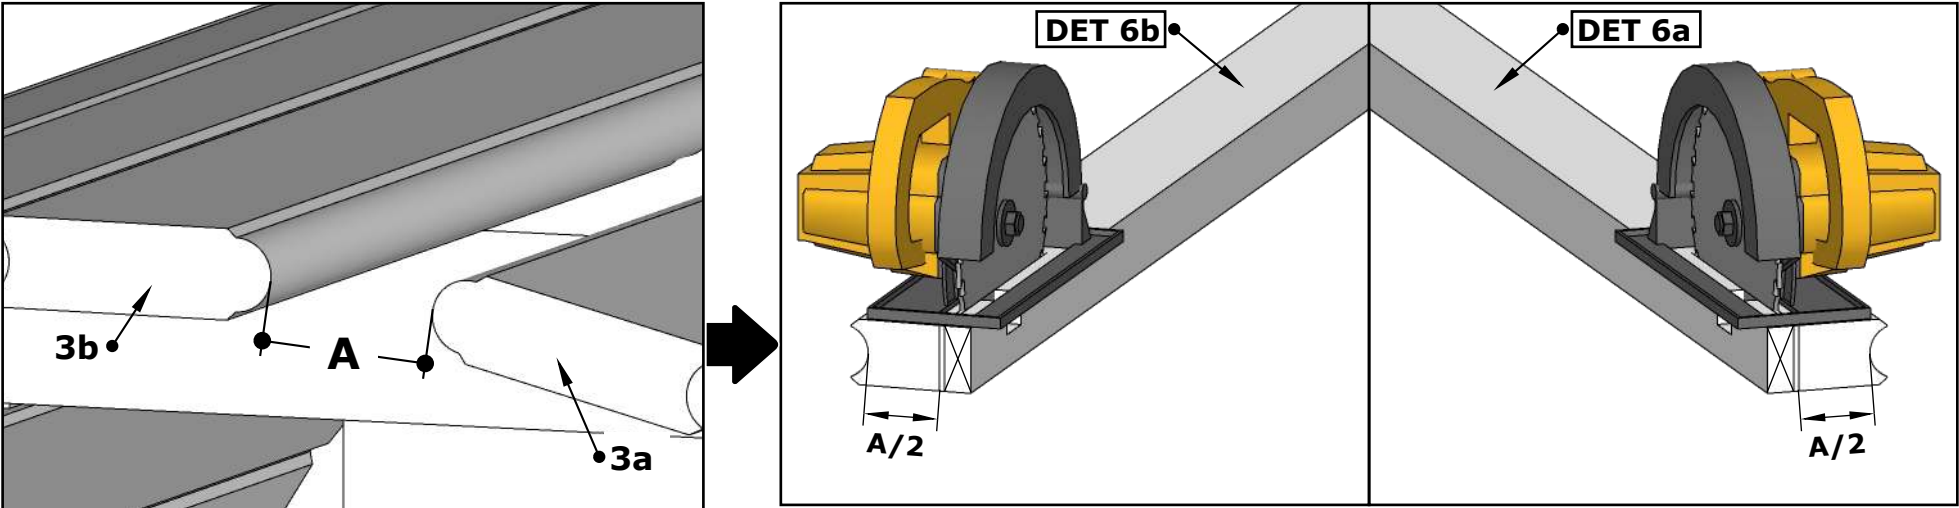

I



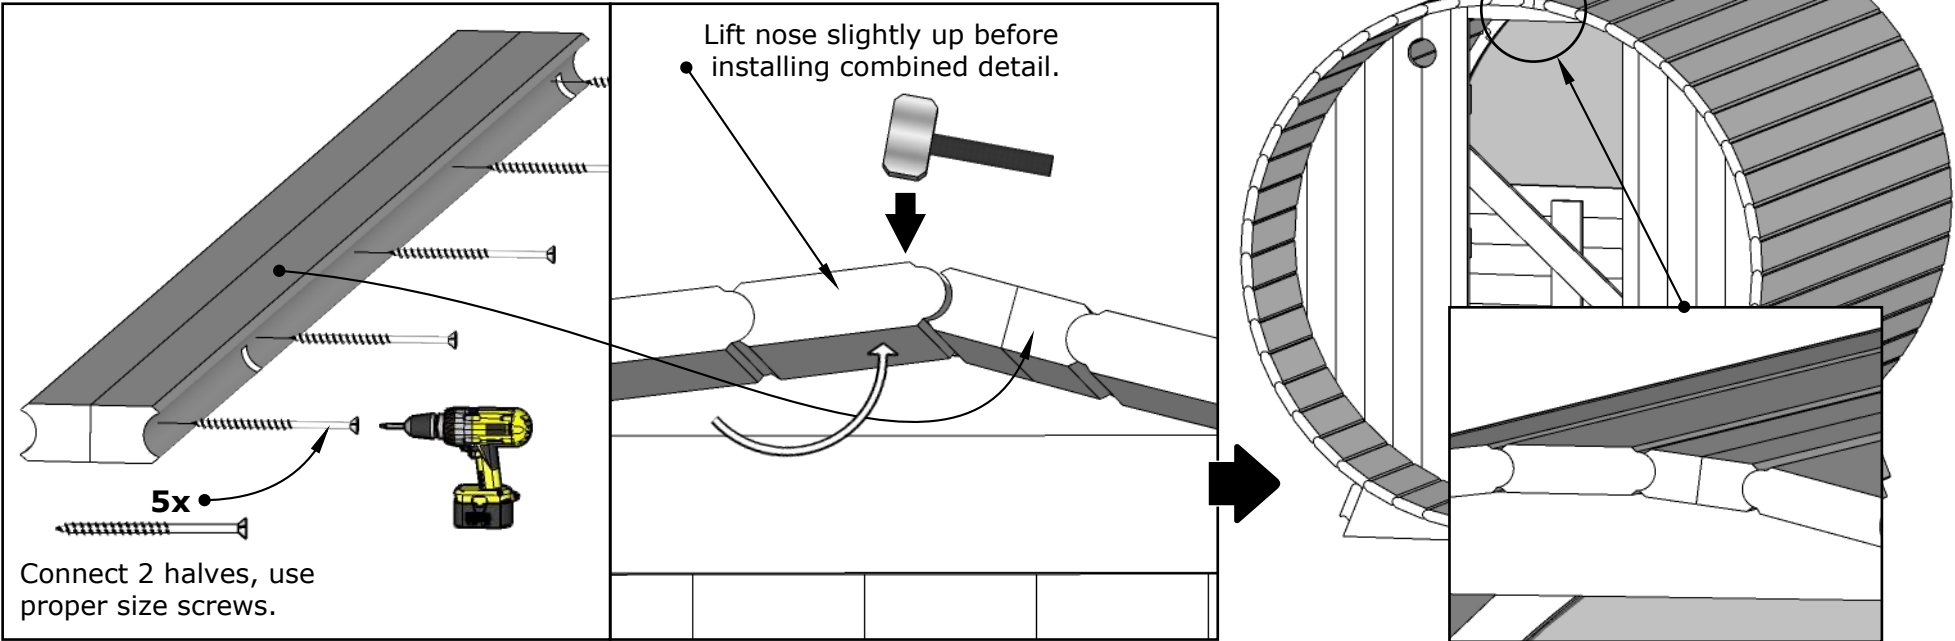


II


DET

Use ratchet strap and remove all screws.  
**Do not!** remove the screws if you sauna is made from thermowood!

# I

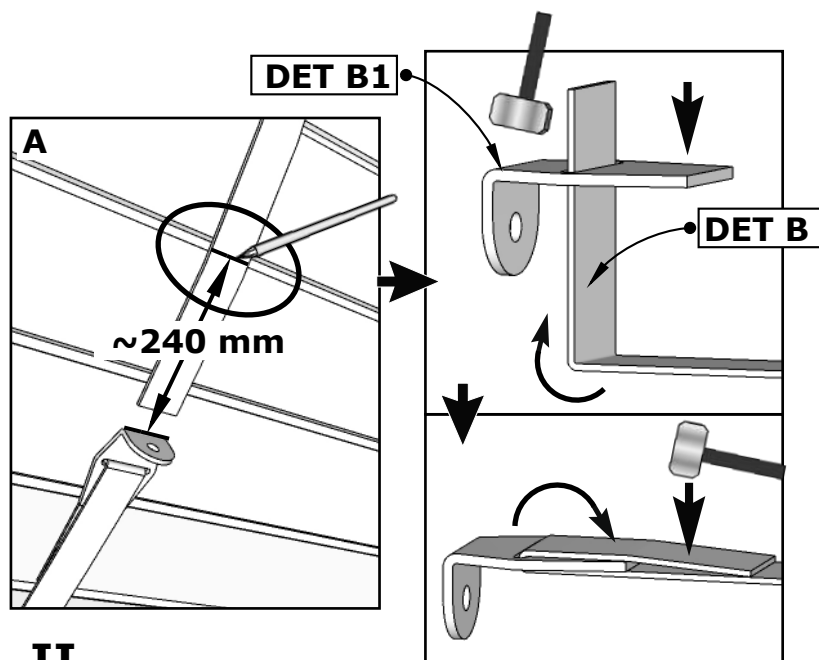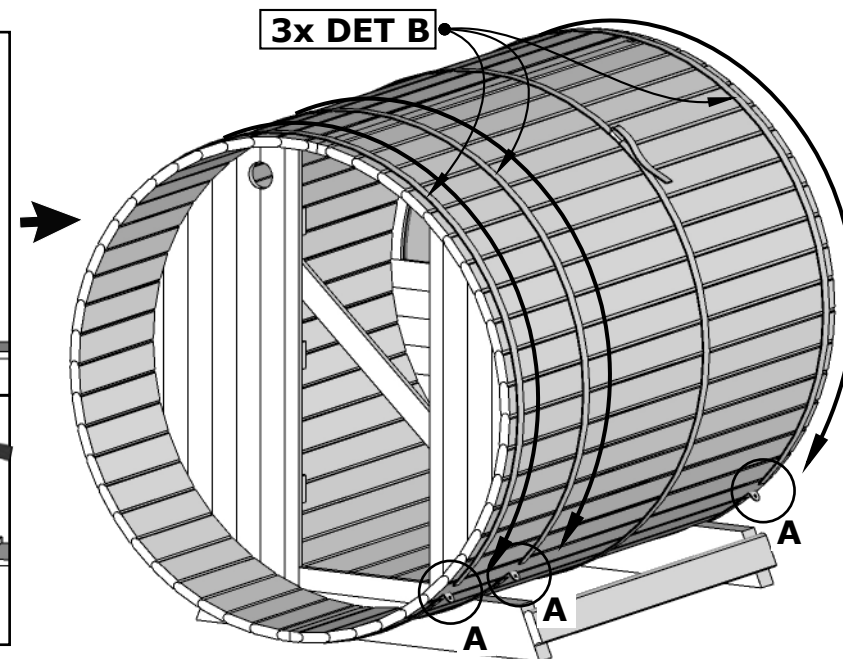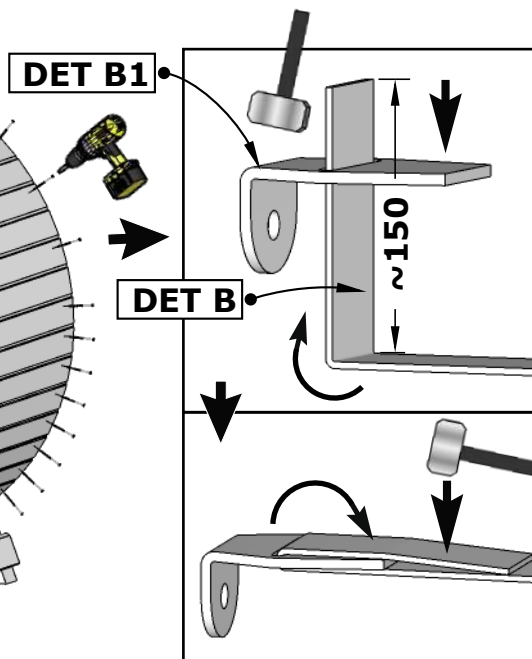


## II

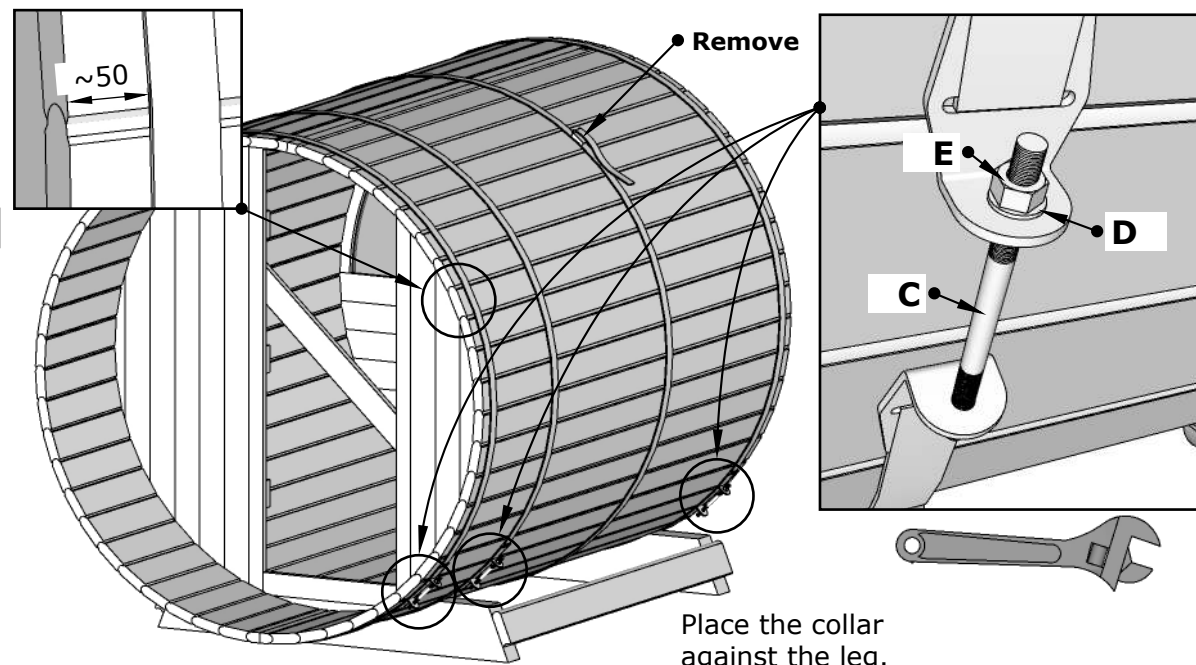


Place the collar  
against the leg.

Sauna 250, Ø200

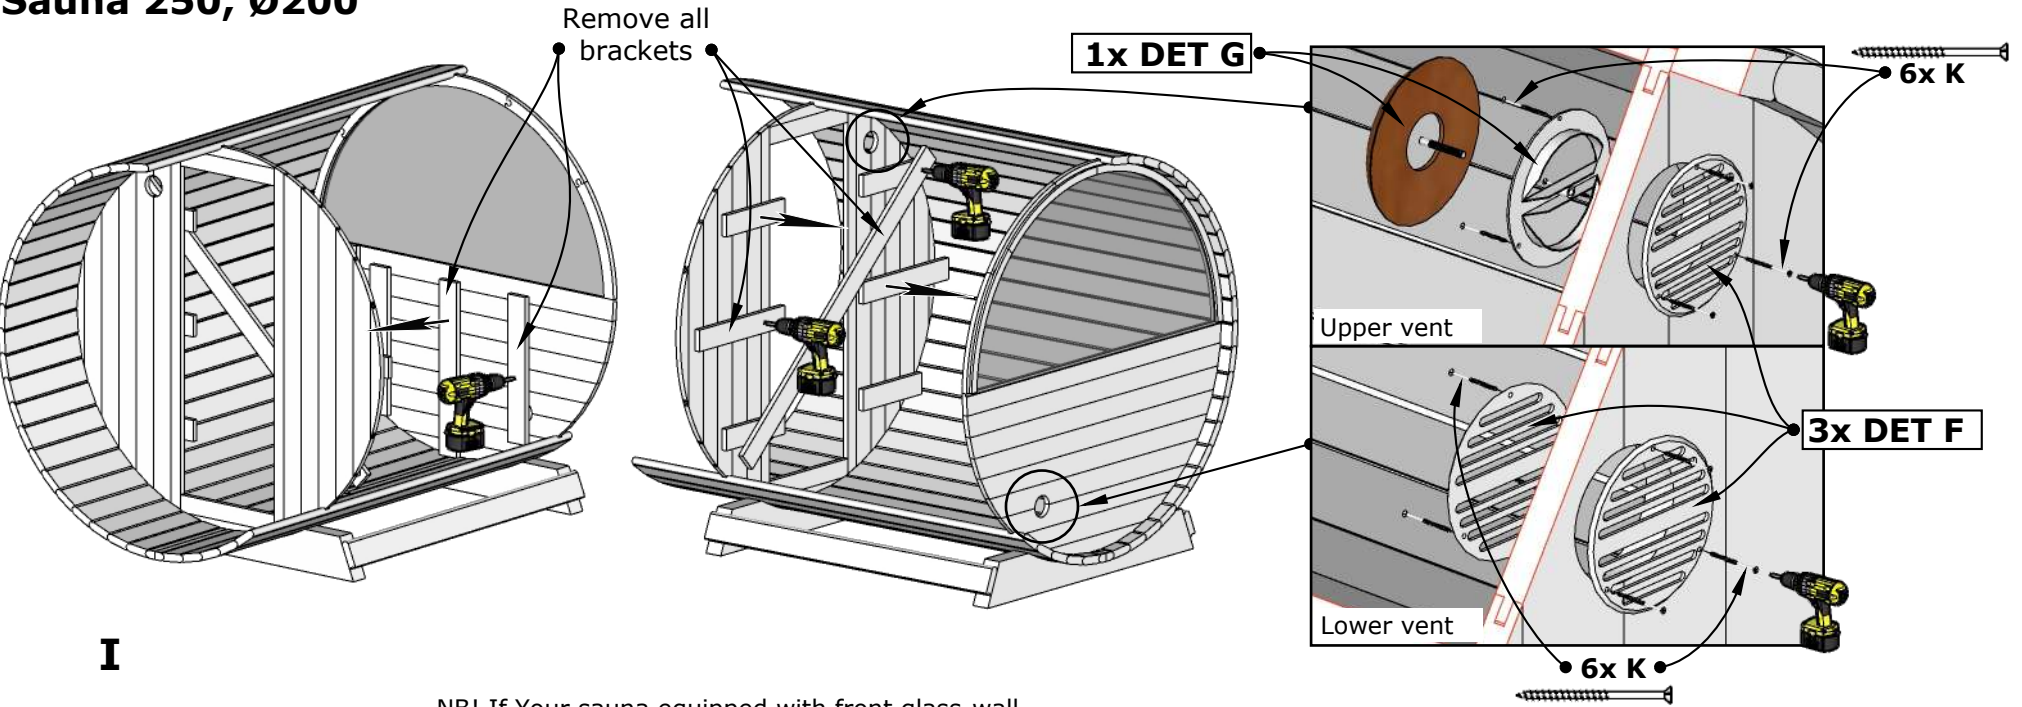

NB! If Your sauna equipped with front glass-wall, the sauna benches installation manual included in front glass-wall installation manual.

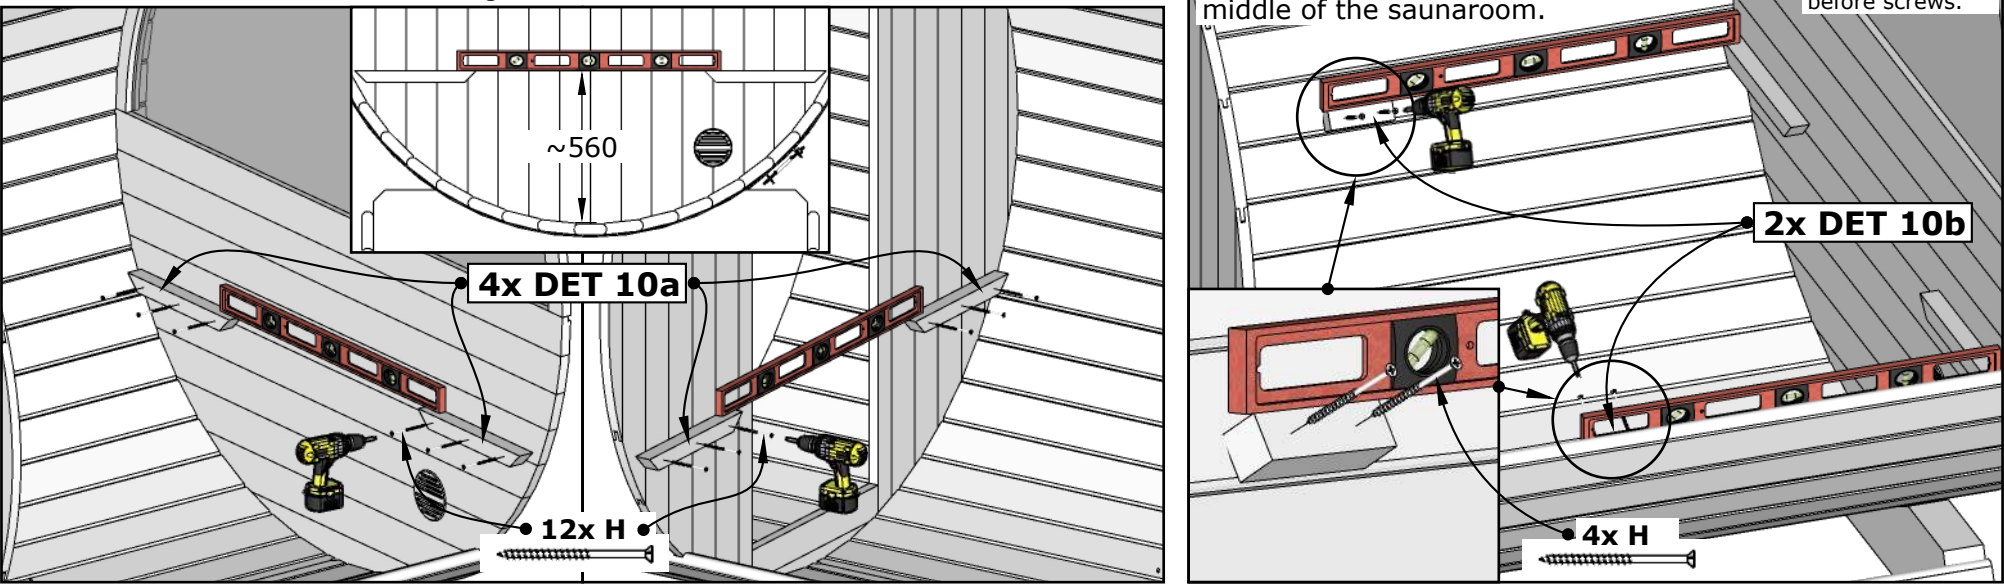

Sauna 250, Ø200

2x DET 10c

Cut on  
right size

2x DET 10

8x H

4x H

I




1x DET 14a

1x DET 14b






8x H

II


Sauna 250, Ø200

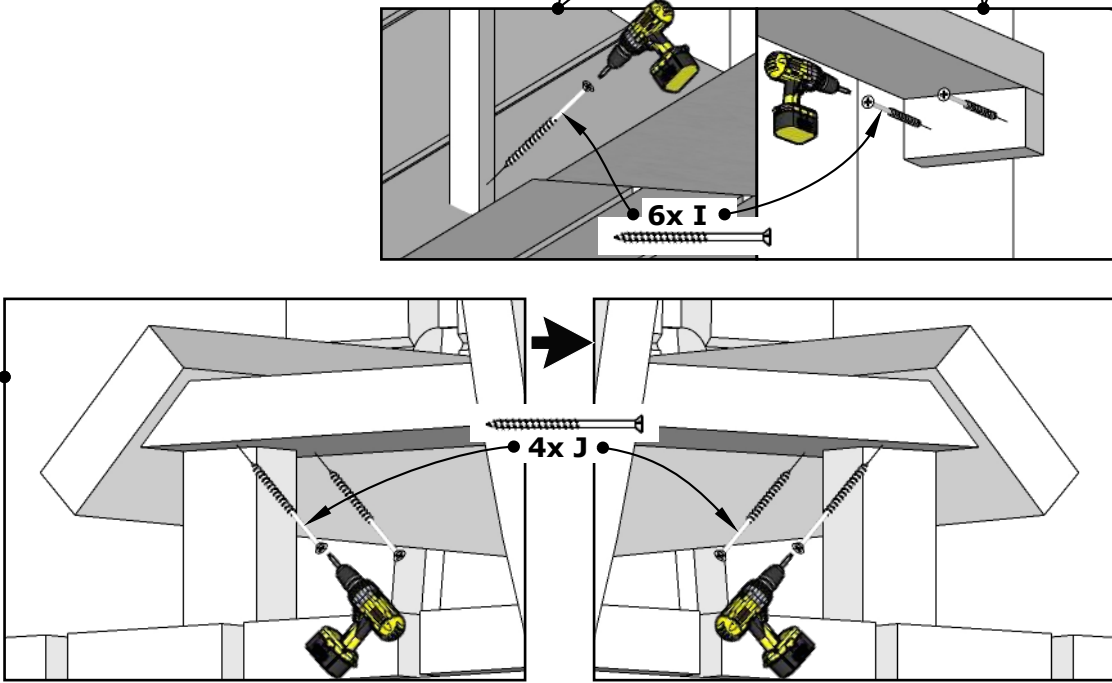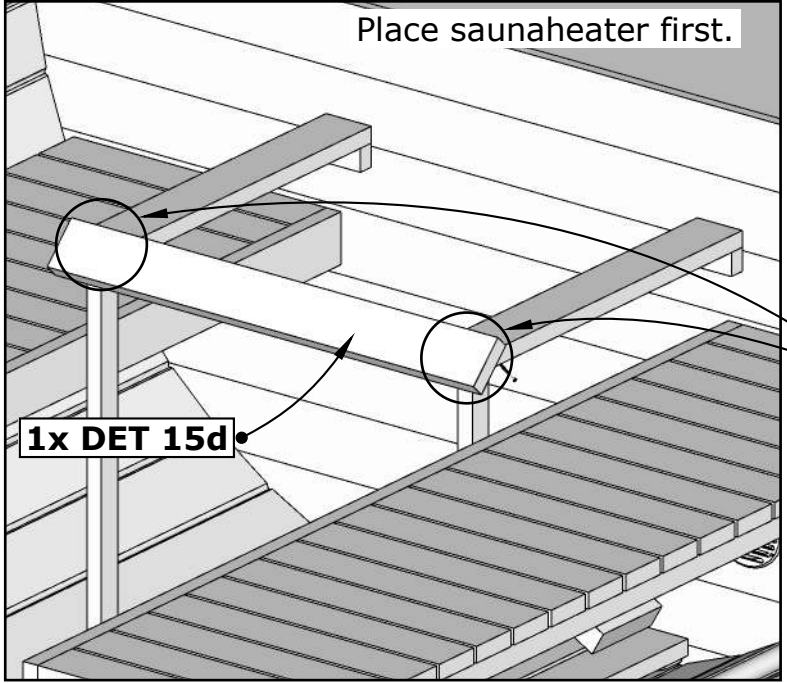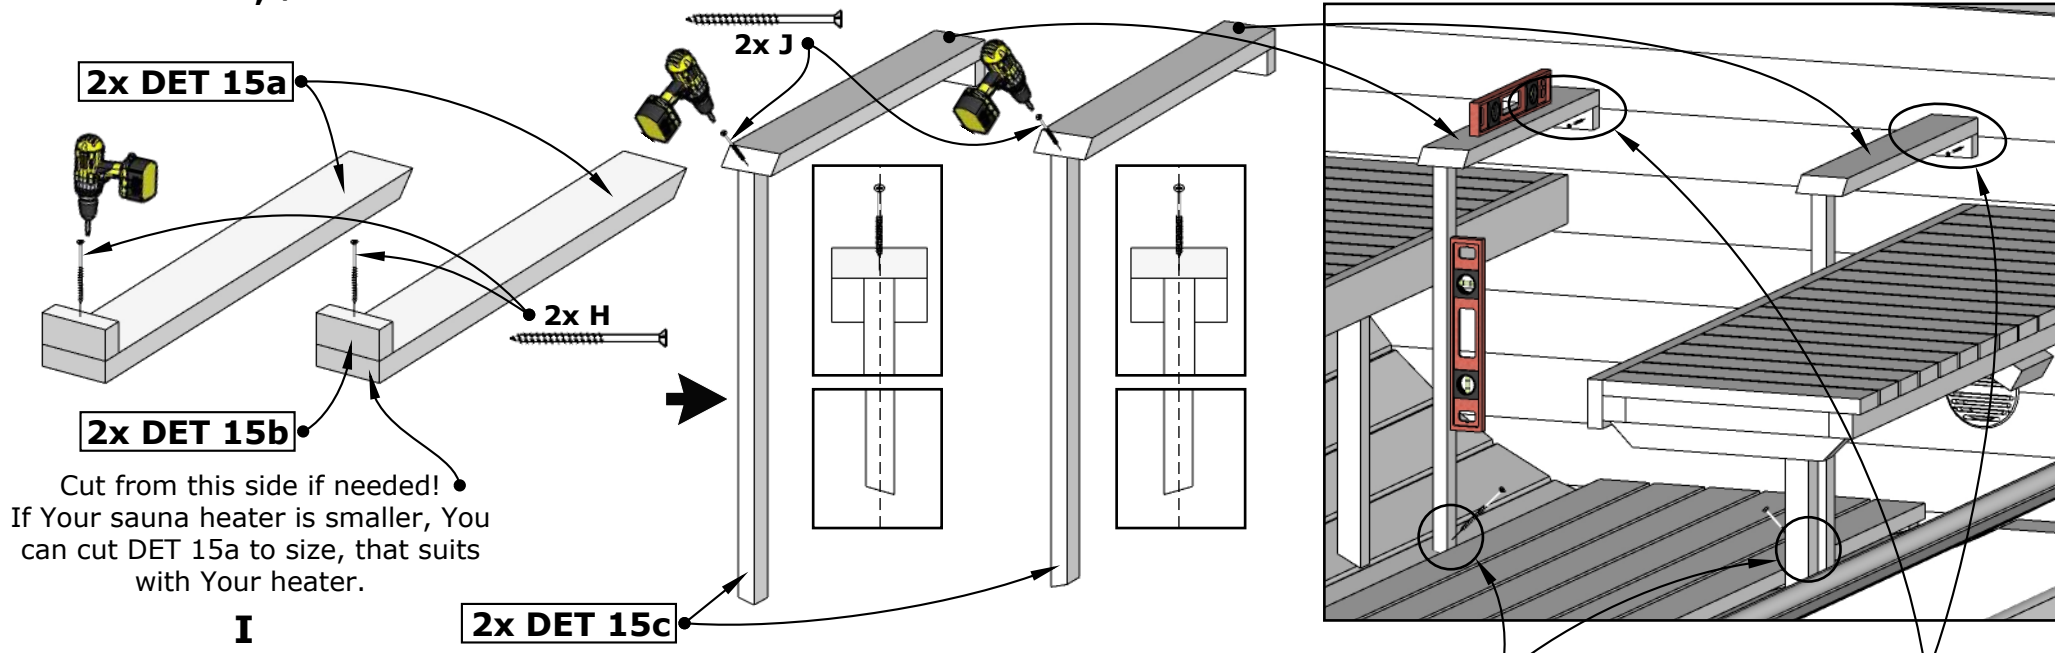




Sauna 250, Ø200

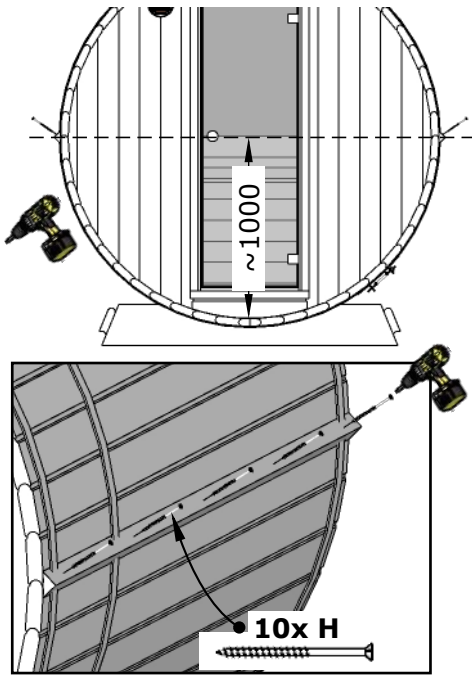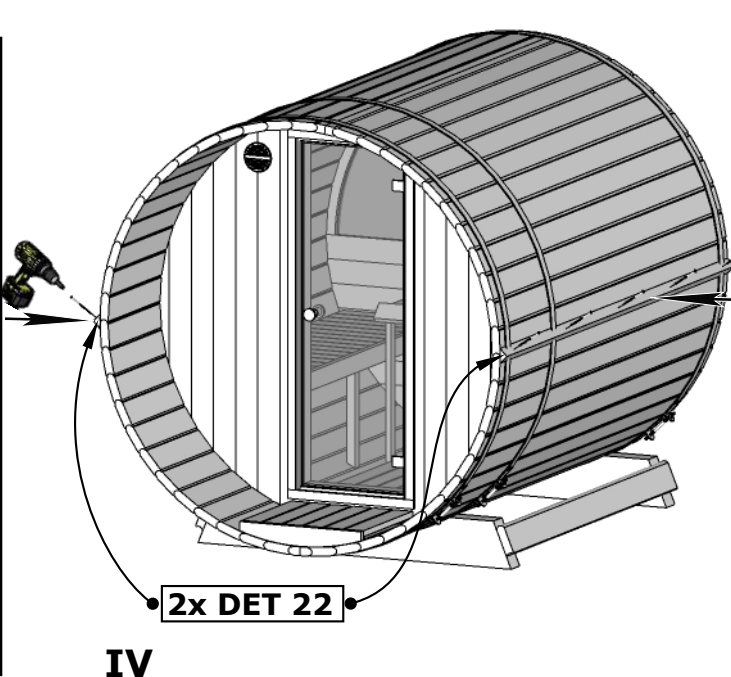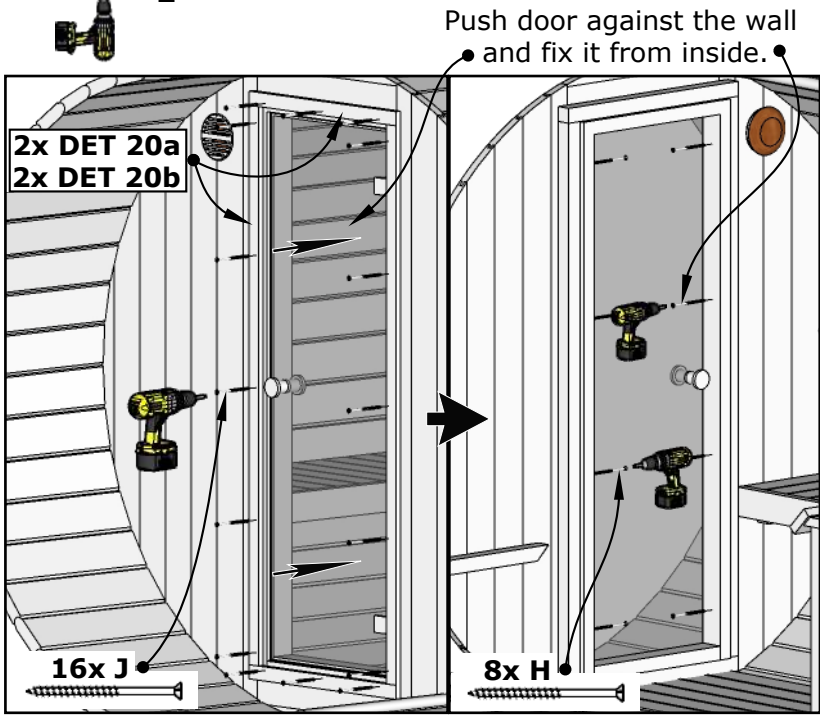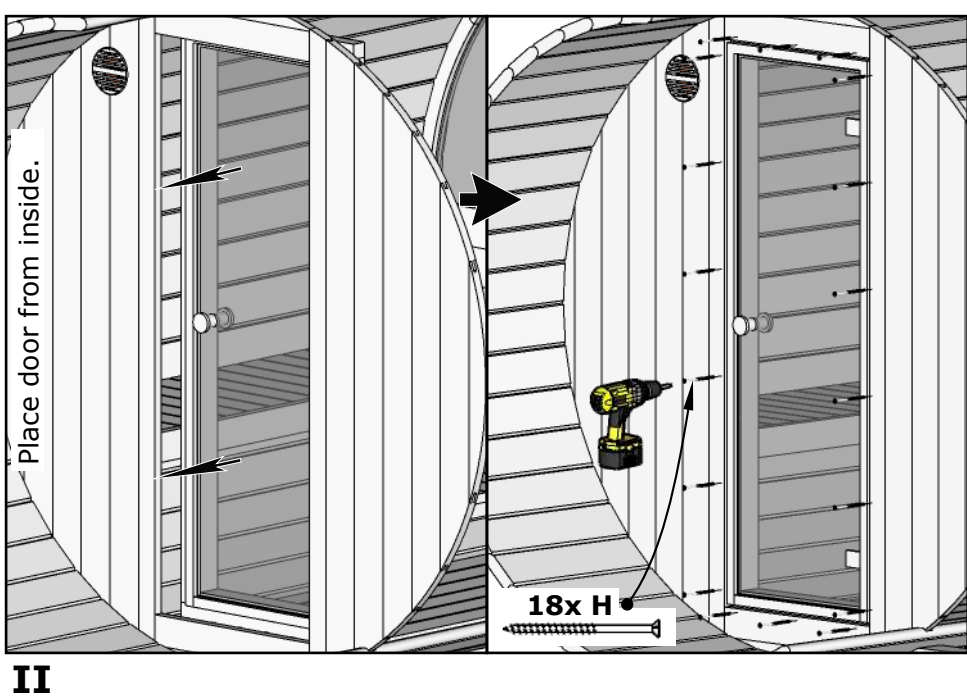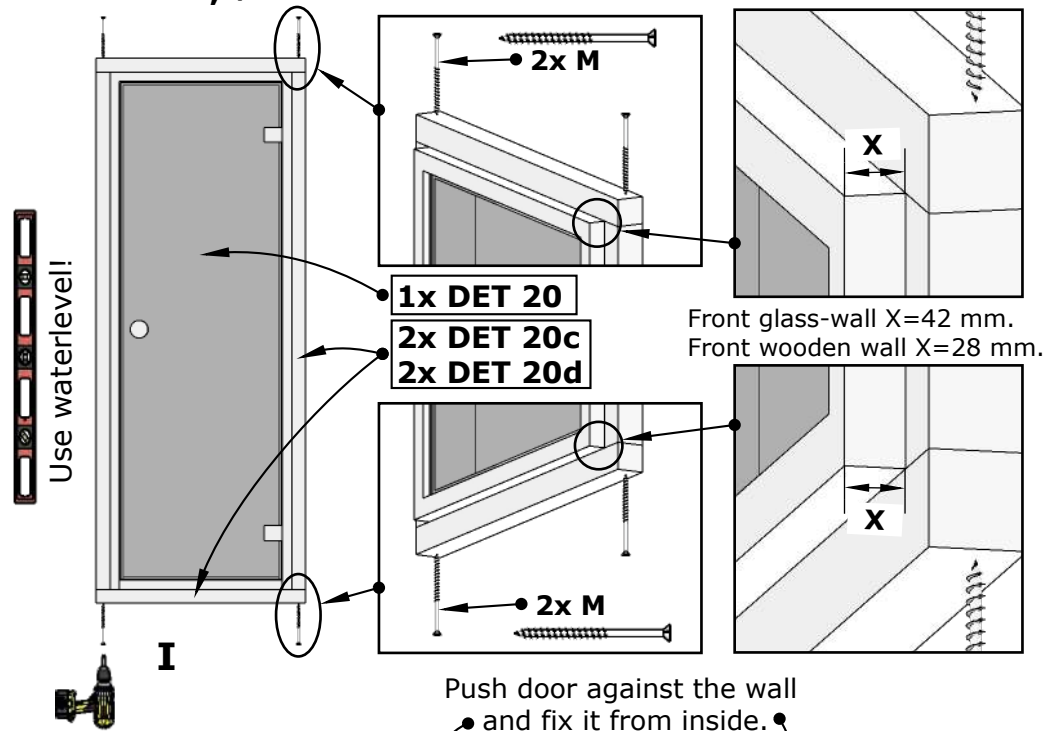

Sauna 250, Ø200

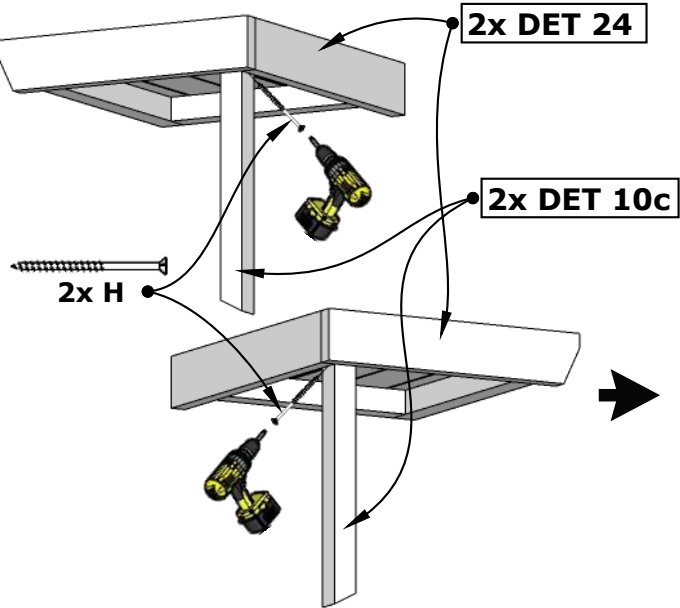


I

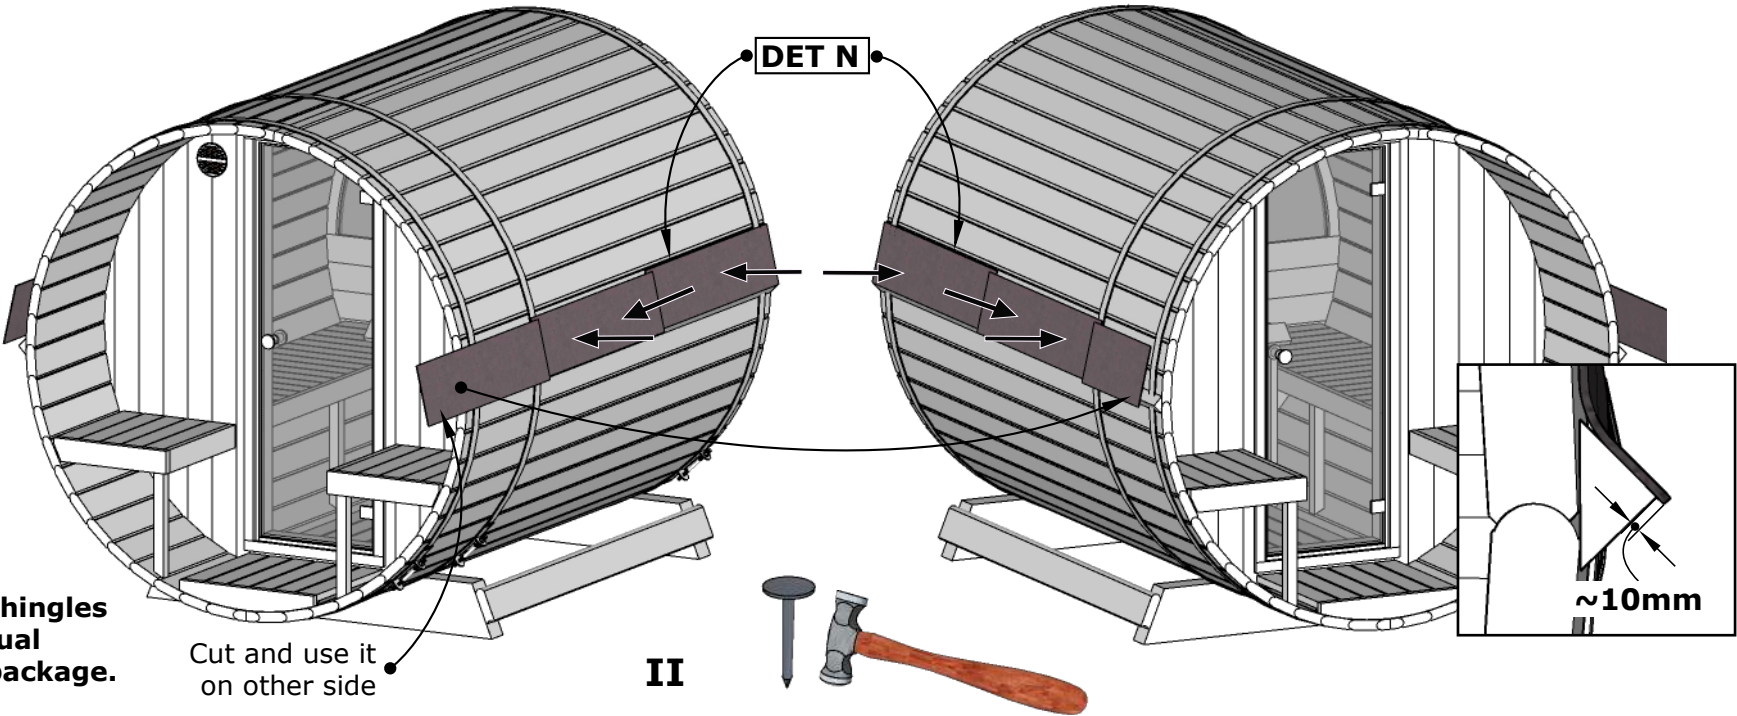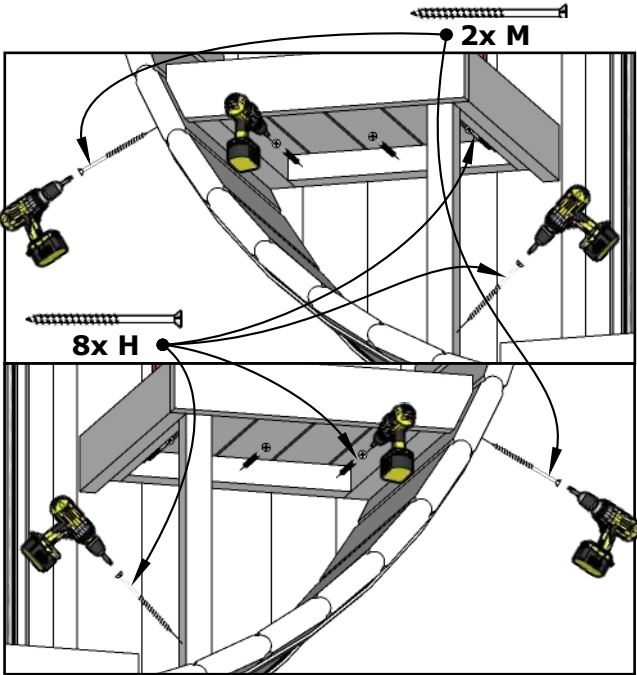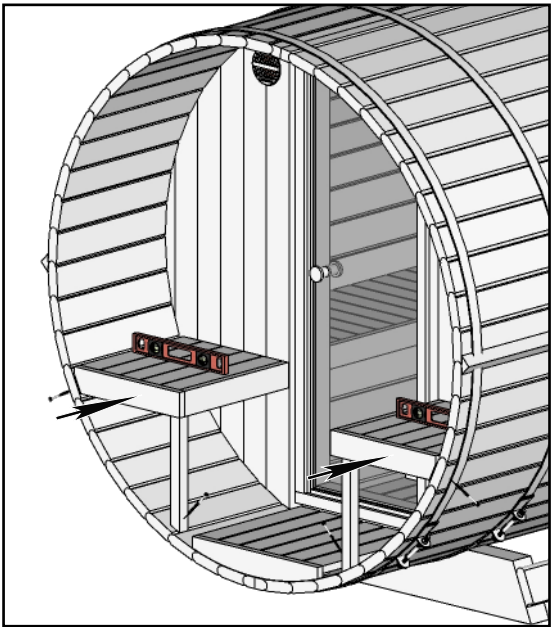

II

NB! Check also shingles installation manual inside shingles package.

Sauna 250, Ø200

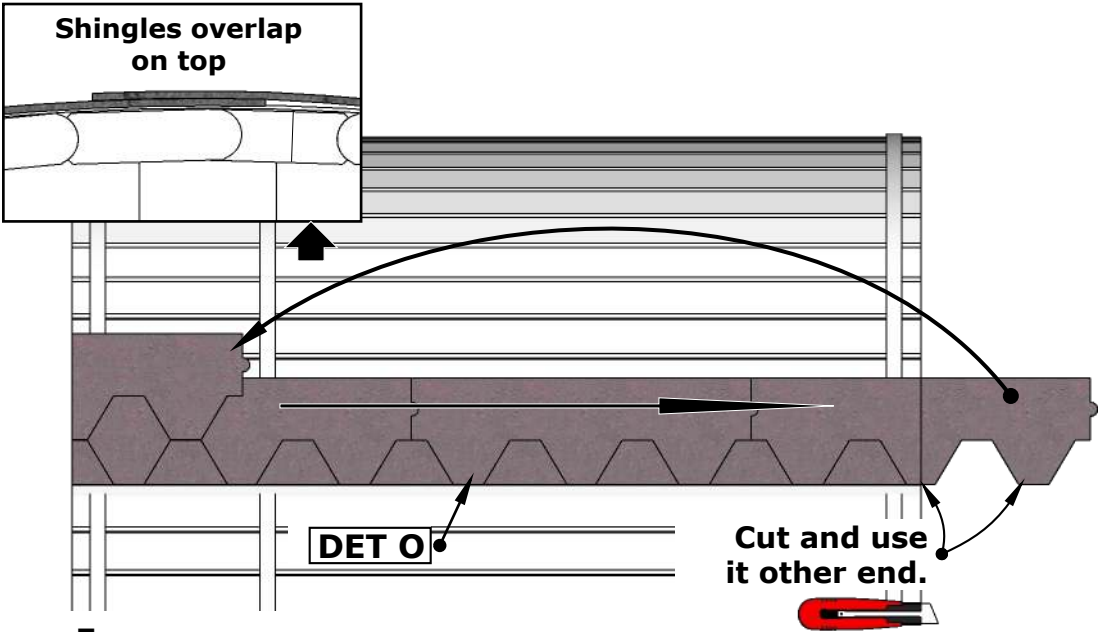

Check also roof shingles installation manual inside package.

